

**USER'S GUIDE
FOR
MICOM-3
RADIO CONTROL APPLICATION**

Revision B

July 2009

TABLE OF CONTENTS

	Page
CHAPTER 1 INTRODUCTION.....	1-1
1-1.SCOPE.....	1-1
1-2.MICOM Radio Control Application Features	1-2
1-2.1 RSS Panel	1-2
1-2.2 RSS ALE Panel	1-3
1-2.3 Computer Interface Panel.....	1-4
1-2.4 MICOM Panels	1-5
1-2.5 CCIR Panel.....	1-7
1-2.6 RSS CCIR Panel	1-8
1-2.7 How to	1-9
CHAPTER 2 INSTALLATION.....	2-1
2-1.Contents of PC Control and Programming Package	2-1
2-1.1 Minimum Computer Requirements	2-1
2-2.BEFORE YOU START	2-1
2-3.INSTALLATION PROCEDURE	2-2
2-3.1 Before Starting the Installation	2-2
2-3.2 To Install the MICOM Radio Control Application.....	2-2
2-3.3 To Test for Proper Installation	2-4
CHAPTER 3 GETTING STARTED	3-1
3-1.BEFORE YOU BEGIN WORKING	3-1
3-2.QUICK START	3-1
3-2.1 Preliminary Steps	3-1
3-2.2 Communication Port Configuration	3-1
3-3.GENERAL PROCEDURES	3-2
3-3.1 Menus and Commands	3-2
3-3.2 MICOM Radio Control Application Windows.....	3-3
3-3.3 The Menu Bars	3-4
3-3.4 The Toolbars	3-6
3-3.5 The Status Line	3-7
3-3.6 Other Important Considerations	3-7
CHAPTER 4 OPERATING INSTRUCTIONS.....	4-1
4-1.RSS Panel.....	4-1
4-1.1 RSS Panel Menus	4-1
4-1.2 Radio Configuration Summary Window	4-4
4-1.3 Radio Wide Information Window	4-7
4-1.4 Configuration Check Window	4-8
4-1.5 Preferences Menu	4-9
4-1.6 Read Device	4-9
4-1.7 Write Device	4-10
4-1.8 Radio Configuration Settings.....	4-10
4-1.9 Channels Configuration	4-11
4-1.10 Groups	4-12
4-1.11 Built-in-Test Equipment	4-13
4-2.RSS ALE Panel.....	4-14
4-2.1 RSS ALE Panel Menus	4-14
4-2.2 ALE Configuration Summary Window	4-17
4-2.3 ALE Configuration Submenu.....	4-21
4-2.4 ALE Messages Configuration.....	4-22
4-2.5 Automatic Dial Configuration.....	4-23
4-2.6 Radio Wide Information Window	4-24
4-2.7 ALE Configuration Check Window	4-25
4-2.8 Configuring the Global Call Parameters.....	4-26

4-3.Computer Interface Panel	4-28
4-3.1 Computer Interface Panel Menus.....	4-28
4-3.2 Channels Tab	4-31
4-3.3 ALE Controls	4-34
4-3.4 Update Link Quality Controls.....	4-35
4-3.5 Using the Stack	4-36
4-3.6 Log File	4-37
4-3.7 Incoming Call Notification	4-38
4-4.MICOM Panel	4-39
4-4.1 MICOM Panel Menus	4-40
4-5.CCIR Panel	4-43
4-5.1 CCIR Panel Menus.....	4-43
4-5.2 CCIR Configuration Summary Window	4-46
4-5.3 Configuring the CCIR Directory.....	4-47
4-6.RSS CCIR Panel.....	4-48
4-6.1 RSS CCIR Panel Menus	4-48

LIST OF ILLUSTRATIONS

	Page
Figure 3-1. Typical File Menu and Open Dialog Box.....	3-2
Figure 3-2. Dialog Box Options.....	3-3
Figure 3-3. Elements of MICOM Radio Control Application Panels	3-4
Figure 3-4. Computer Interface Panel Menu Bar.....	3-5
Figure 3-5. RSS Panel Menu Bar	3-5
Figure 3-6. RSS ALE Panel Menu Bar	3-5
Figure 3-7. CCIR Panel Menu Bar	3-5
Figure 3-8. MICOM Panel Menu Bar	3-5
Figure 3-9. Computer Interface Panel Toolbar	3-6
Figure 3-10. RSS Panel Toolbar	3-6
Figure 3-11. RSS ALE Panel Toolbar	3-6
Figure 3-12. CCIR Panel Toolbar.....	3-6
Figure 3-13. MICOM Panel Toolbar.....	3-6
Figure 3-14. The Status Line	3-7
Figure 4-1. Radio Wide Information Window	4-7
Figure 4-2. Configuration Check Window	4-8
Figure 4-3. Communication Ports Dialog Box.....	4-9
Figure 4-4. Channel Configuration Dialog Box	4-11
Figure 4-5. BITE Dialog Box	4-13
Figure 4-6. Radio Wide Information Window	4-24
Figure 4-7. MICOM Panel Menu Bar (MICOM-3)	4-40
Figure 4-8. MICOM Panel Toolbar	4-40

CHAPTER 1

INTRODUCTION

1-1. SCOPE

This User's Guide covers the PC Control and Programming package, which includes the MICOM Radio Control (MRC) application, a simple, user-friendly program that can be run on any personal computer with Microsoft Windows® 2000 and later versions.

MICOM is a family of high-performance, DSP-based, multi-purpose HF SSB radios intended for use in voice, data and fax communications, in both mobile and base station configurations. MICOM radios can be integrated into a wide range of advanced communication systems, including data and fax networks, HF-VHF-UHF-microwave and telephone interconnect, high-power (up to 1 kW) systems, etc. MICOM radio sets ordered with the appropriate options support channel scanning, and Automatic Link Establishment (ALE) per FED-STD-1045A and MIL-STD-188-141B. ALE provides unique advantages that significantly reduce operational inconveniences caused by the very nature of HF channels. ALE enables MICOM radio sets to automatically test all channels on the system and then use the best working channel available whenever calling a specific station or group of stations operating in a network. Thus, ALE ensures the best link possible and achieve greater efficiency and reliability in communications.

MICOM radio sets also support digital selective calling per CCIR Rec. 493.

MRC enables remote operation of MICOM radios via a personal computer, and programming of its features and operational parameters. Programming, or customizing, personalizes a radio for the needs of individual customers, resulting in radios with unique personalities. To control or configure a MICOM radio, you must connect it to a serial communication port of the PC running the MRC (the required cable is supplied in the package).

This User's Guide version covers MRC Version 2.10.

For information on the MICOM-3 characteristics and operation, refer to the MICOM-3F/3T/3R Owner's Guide (6886867J01).

1-2. MICOM RADIO CONTROL APPLICATION FEATURES

The MICOM Radio Control application provides an integrated control center that seamlessly combines the following functions:

- Radio Service Software Panel (RSS Panel)
- Radio Service Software for ALE Panel (RSS ALE Panel)
- Computer Interface Panel
- MICOM Panel

For radio sets equipped with the CCIR digital selective calling option, MRC also supports the following functions:

- International Radio Consultative Committee (CCIR) Panel (CCIR Panel)
- Radio Service Software CCIR Panel (RSS CCIR Panel).

1-2.1 RSS Panel


Used to program the features and operational parameters of the radio for operation in the following modes:

- Discrete channels
- Scan mode (a mode available when ALE is disabled).

Also allows displaying the installed features and options. This information, as well as the radio configuration parameters, are automatically retrieved from the radio upon connection to the MRC, and also upon user's command.

RSS parameters are stored in files with the *.rss extension. The prepared parameters can be downloaded (written) to the radio whenever necessary.

With the **RSS Panel**, you can perform extensive testing of the radio by means of its built-in test equipment (BITE) function.

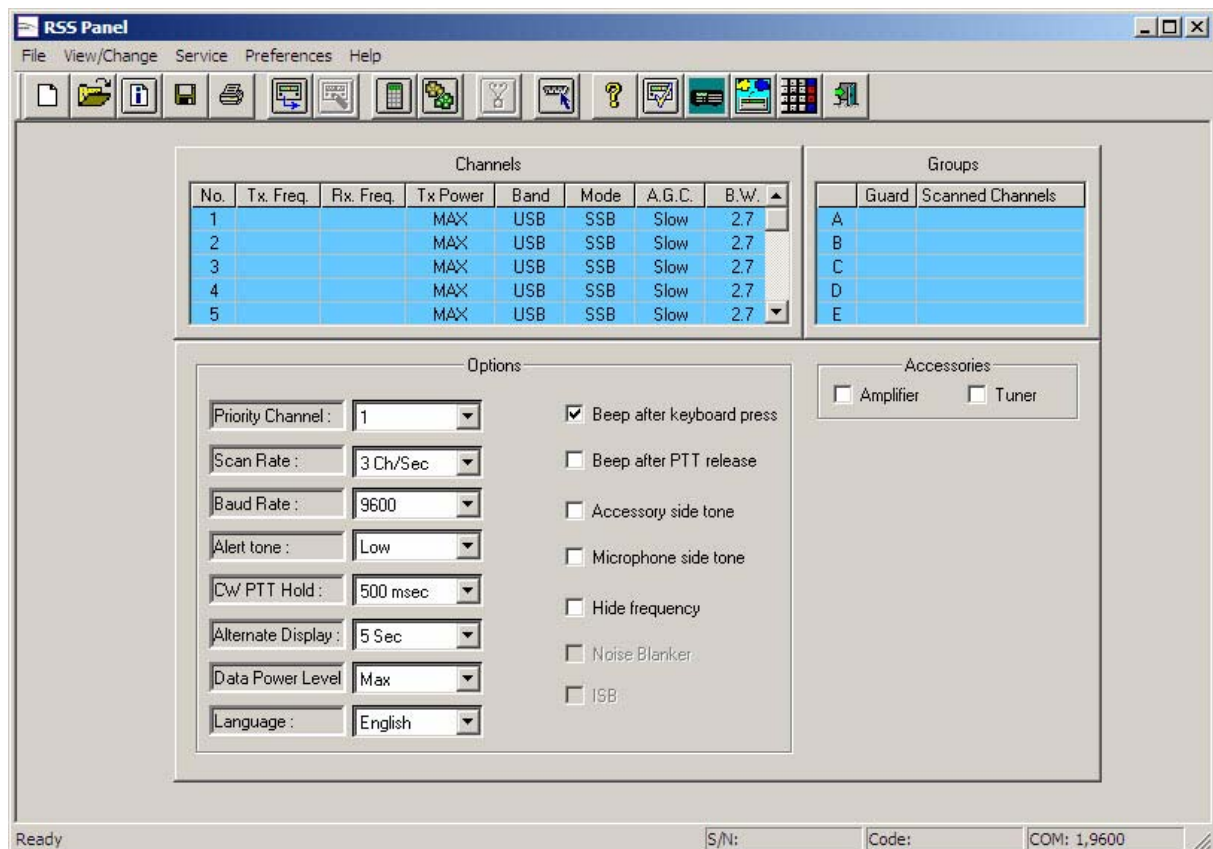

1-2.2 RSS ALE Panel

Used to program the additional features and operational parameters of the radio for operation in the ALE mode.

You can also plan and configure ALE networks, define their members, manage the ALE network directories, and create and edit paging (AMD) messages.

The RSS ALE panel also allows displaying the installed features and options.

ALE parameters are stored in files with the ***.ale** extension. Other ALE information is stored in files with ***.txt** extension.

The screenshot shows the 'RSS ALE Panel' window with the following configuration details:

- Net Configuration:**
 - Net No: 1
 - Net Name: WORLD
 - Self Address: ENGLAND
- Net Options:**
 - Scan Rate: 2 Ch/Sec
 - Tune Time: No Tune Time
 - Master/Slave: Master (selected)
 - ☐ Silent
 - ☐ Send All Call
 - ☒ Home Ack.
 - ☐ Receive All Call
 - ☒ Mon Ack.
 - ☒ LQA Request
 - Sounding: Manual
 - Occupancy Check: OFF
- Channels:**
 - All Call Channel: Scanned Channels
 - 1,2,3,4,5,6
- Global Members Name:** EUROPE
- ALE Options Configuration:**
 - PTT Timeout: No Timeout
 - Min. LQA: 0
 - ☒ Ext. Alarm
 - ☒ Alert
 - ☒ Wildcard
 - ☒ AMD
 - Accept Link TOT:
 - ☐ Accept Link TOT no
 - ☒ Accept Link TOT Yes
 - ☐ Accept Link TOT 2
 - ☐ MultiNet
 - Mx CH: Auto
 - ☒ Anycall
 - ☒ VCDs
 - ☒ LINK AFTER BDIR
 - ☒ Quick PTT Call
 - ☒ Auto Address
 - ☐ In_LINK
- Members:**
 - FRANCE
 - GERMANY
 - ITALY
 - SPAIN
- Global Members:**
 - FRANCE
 - GREECE
 - SPAIN
- Directory Configuration:**
 - FRANCE
 - GERMANY
 - GREECE
 - ITALY
 - SPAIN

At the bottom of the window, the status bar shows: Ready, S/N:, Code:, and COM: 1,9600.

1-2.3 Computer Interface Panel


Used to control the MICOM radio from a remote or local location, using a personal computer.

Separate panels are used to control the radio in the following main modes:

- Channel mode (shown below)
- ALE mode: for convenience, the panel used for regular operation has been separated from the panel used to initiate link quality updates.

MRC stores information on calls sent and received in a log file that can be displayed under the computer interface panel. The file can be saved, edited and printed as necessary.

The **Computer Interface Panel** also enables performing extensive testing by means of the radio BITE function.

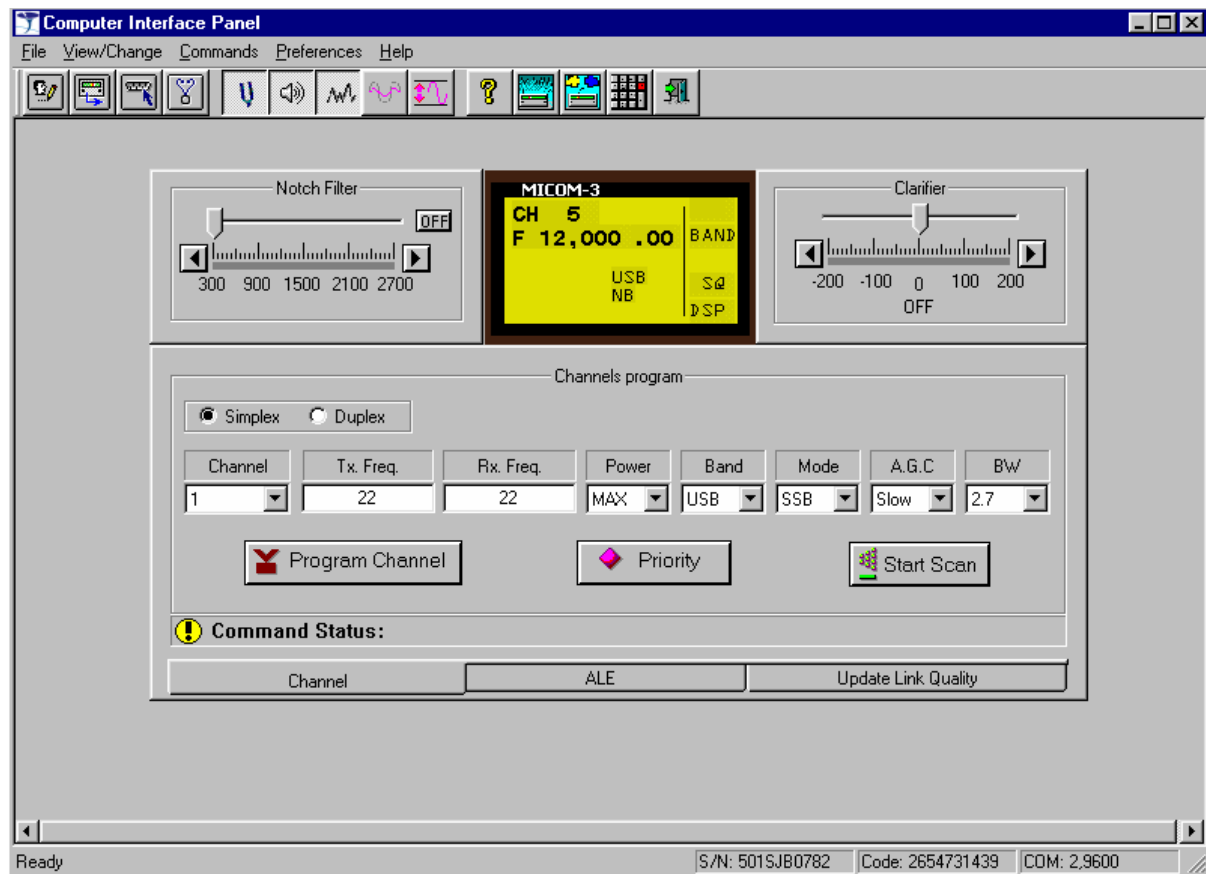


1-2.4 MICOM Panels

Depending on the radio version connected to the PC, you may see either the MICOM-3 or MICOM-2 panel.

1-2.4.1 MICOM-3 Panel

Displays a mimic of the MICOM-3 panel that can be directly controlled by means of the computer mouse and keyboard. Offers a simple, clear way of simulating the most widely used panel operations, as a replacement for the **Computer Interface Panel**, just as you would operate the radio in accordance with the MICOM-3 Owner's Guide (6886867J01).


MRC stores information on calls sent and received in a log file that can be displayed under the MICOM-3 panel. The file can be saved, edited and printed as necessary.

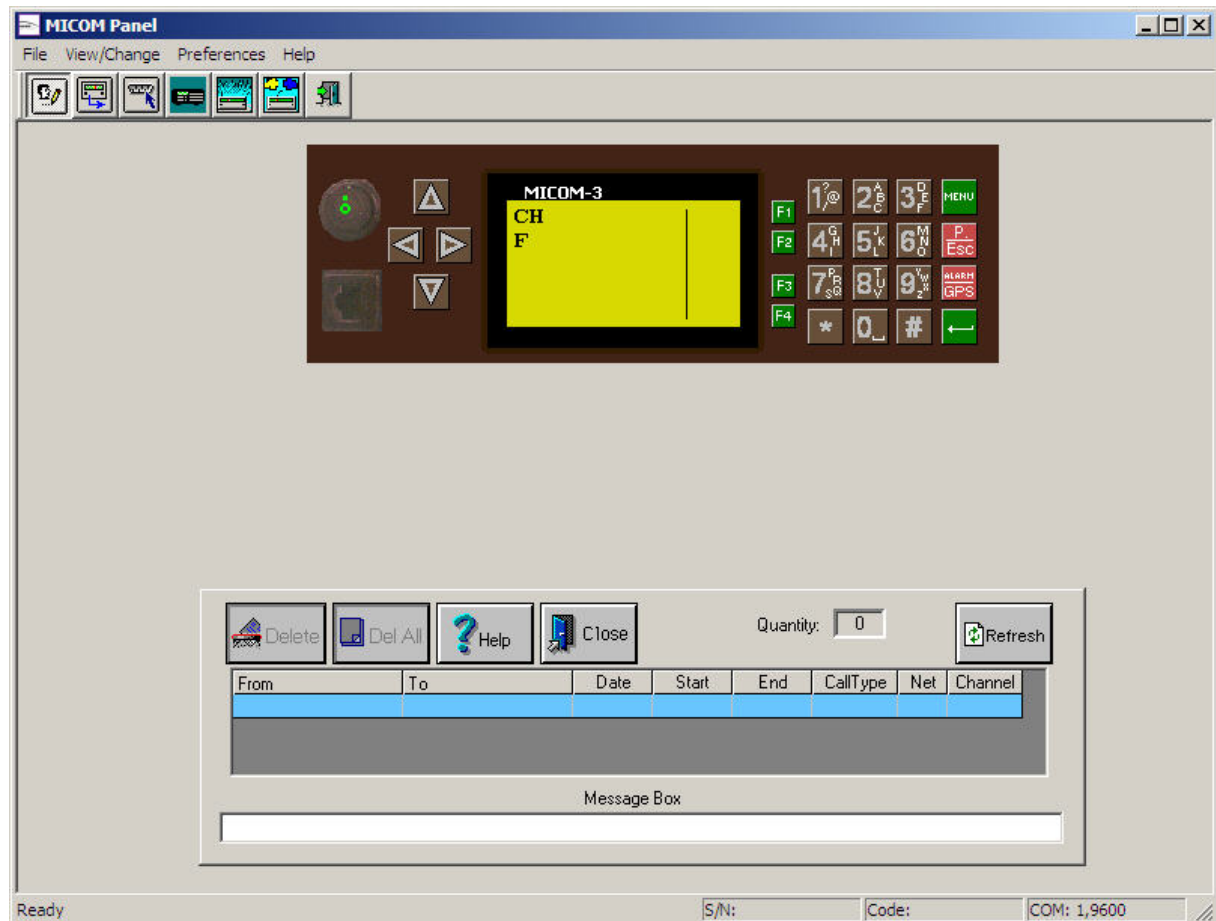

1-2.4.2 MICOM-2E Panel

Displays a mimic of the MICOM-2E panel that can be directly controlled by means of the computer mouse and keyboard. Offers a simple, clear way of simulating the most widely used panel operations, as a replacement for the **Computer Interface Panel**, just as you would operate the radio in accordance with the MICOM-2E Owner's Guide.


MRC stores information on calls sent and received in a log file that can be displayed under the MICOM-2 panel. The file can be saved, edited and printed as necessary.

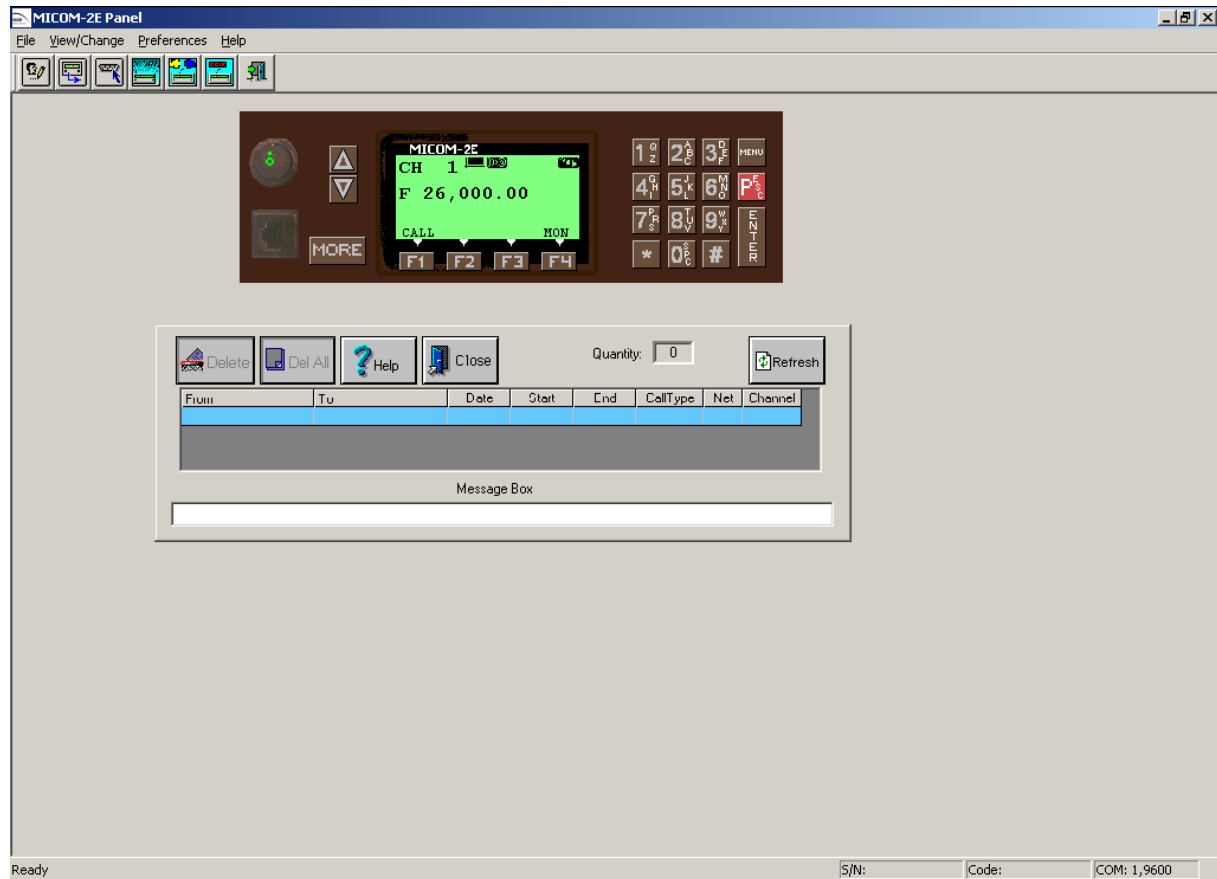

1-2.5 CCIR Panel

Used to configure the parameters needed to use digital selective calling (DSC) protocol per CCIR Rec. 493 (including the directory of stations using the CCIR DSC protocol, and control over the call-received indication in the MICOM accessories connector)

This panel is displayed only when connected to a MICOM radio set supporting the CCIR option.

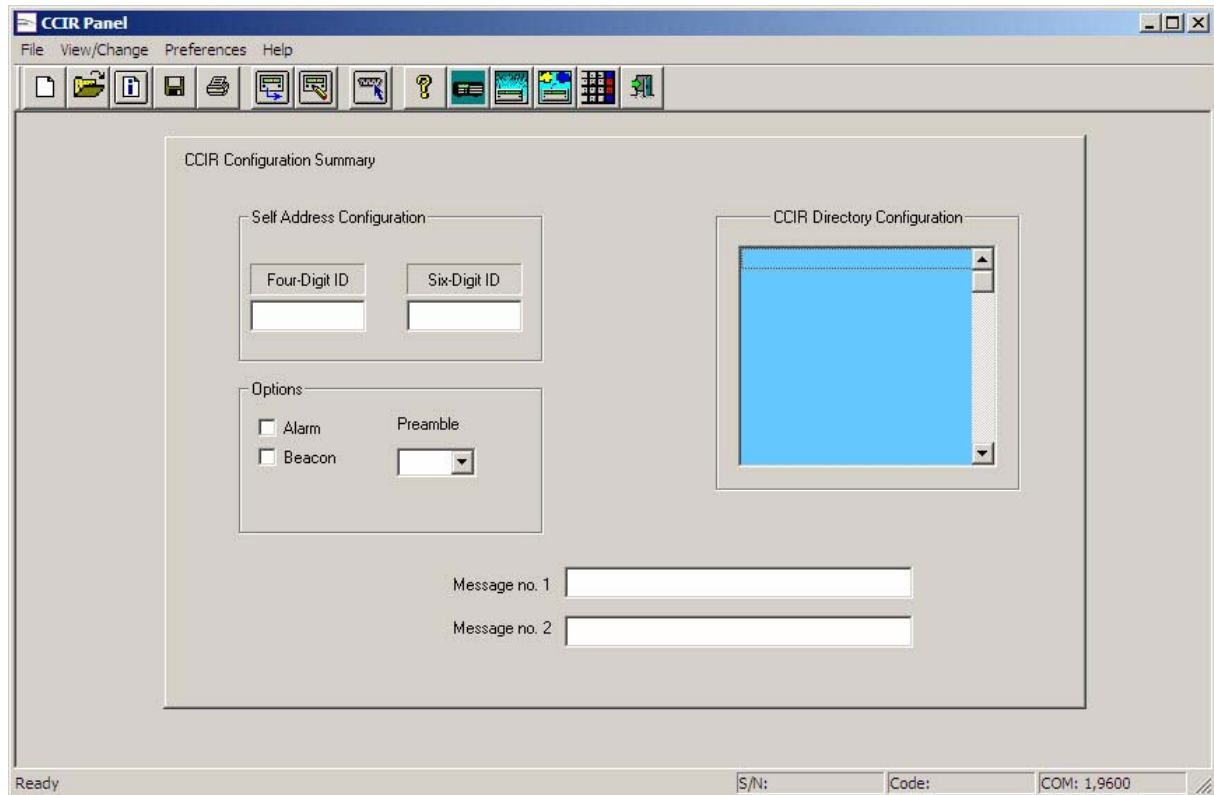

1-2.6 RSS CCIR Panel

The RSS CCIR Panel replaces the standard RSS Panel when connected to radio sets supporting the CCIR digital selective call option. Its functions are similar to those of the RSS Panel explained above, except for an additional parameter, the Ch. Num, which serves as a channel name that enables increasing the number of programmed channels up to 500.

The screenshot shows the 'RSS Panel' software window with a menu bar (File, View/Change, Service, Preferences, Help) and a toolbar. The main area is divided into three sections: Channels, Groups, and Options/Accessories.

Channels Table:

No.	Tx. Freq.	Rx. Freq.	Tx Power	Band	Mode	A.G.C.	B.W.	Ch. Num.
1	2	2	MAX	USB	SSB	Slow	2.7	1
2	3	3	MAX	USB	SSB	Slow	2.7	2
3	5	5	MAX	USB	SSB	Slow	2.7	3
4	8	8	MAX	USB	SSB	Slow	2.7	4
5	12	12	MAX	USB	SSB	Slow	2.7	5

Groups Table:

	Guard	Scanned Channels
A		7,8,9
B		
C		
D		
E		

Options Section:

- Priority Channel: 1
- Scan Rate: 2 Ch/Sec
- Baud Rate: 9600
- Alert tone: Low
- CW PTT Hold: 150 msec
- Alternate Display: 5 Sec
- Data Power Level: Low
- Language: English

Accessories Section:

- ☐ Beep after keyboard press
- ☐ Beep after PTT release
- ☐ Accessory side tone
- ☐ Microphone side tone
- ☐ Hide frequency
- ☐ Noise Blanking
- ☐ ISB
- ☐ Amplifier
- ☐ Tuner

Status Bar: Ready | S/N: | Code: | COM: 1,9600

1-2.7 How to ...

With the MICOM Radio Control application, you can handle two types of tasks:

- Configuration: “read” (upload) existing radio configuration, change radio configuration, and “write” (download) the new/changed configuration to the radio. Any configuration data (whether raw configuration read from the radio, modified configuration data, or a completely new configuration prepared on the computer) can be stored as files on the computer disk, for backup, documentation, planning, and reuse; file contents can also be printed in human-readable format on a printer connected to the computer.
- Operation: operate the radio with the computer mouse and keypad. Log files record the calls handled by the radio; you can delete calls from the log as required; you can also store log files as disk files, and print them.

1-2.7.1 Configuration Tasks

Configuration tasks are performed with the **RSS Panel** and **RSS ALE Panel**. For radio sets supporting the CCIR protocol, you need to configure the specific parameters needed by the CCIR protocol using the **CCIR Panel**, and the **RSS Panel** function is also replaced by **RSS CCIR Panel**.

Reading and writing the radio, ALE, and optionally the CCIR parameters databases expedites the configuration of radios used in a common environment. Alternative configurations for different missions can be prepared ahead, and rapidly downloaded to the radios as required.

- In a typical (on-line) scenario, you would connect a radio to the computer, read its radio and ALE and CCIR databases and store them as files. Using these files, you would create files for other radios, or files for use in other circumstances. After the files are ready, you can open the appropriate file, and then “write” the parameters to the radio, as required. When working with only one radio, you may leave the radio connected and switch to the **Computer Interface Panel** or the **MICOM Panel**, to work with the radio from the computer.

NOTE

Group configuration data for use in the SCAN mode must be prepared on the computer, and then written to the radio.

- Alternately, you can prepare complete configurations off-line, using the **RSS Panel** and **RSS ALE Panel**, respectively **CCIR Panel** and **RSS CCIR Panel** functions. In this case, you do not need to connect the computer running the MRC application to a radio until you are ready to program it, or want to operate it from the computer.

The MRC application automatically performs extensive validity checks that ensure the parameters prepared by you are consistent. Any incorrect or out-of-range entry is therefore immediately detected and reported in clear language in a pop-up information box or in the prompt and help line of the corresponding screen. All the configuration errors are recorded in a special file (the configuration check file), which can be displayed and analyzed to find the causes for inconsistency. You can program a radio only after all the detected errors have been corrected.

1-2.7.2 Operation

You can operate the radio with the **Computer Interface Panel** or the **MICOM Panel**. With these panels, you can also change the current channel parameters or operating mode, just as you would be able to do when using the radio front panel.

Intentionally Left Blank

CHAPTER 2

INSTALLATION

2-1. CONTENTS OF PC CONTROL AND PROGRAMMING PACKAGE

Check that you have received the following items:

1. MICOM Radio Control (MRC) application software, supplied on a CD.
2. This User's Guide.
3. Programming cable (connects 9-pin D-type PC serial communication port to the 44-pin accessories connector of MICOM-3 radio sets).

2-1.1 Minimum Computer Requirements

The MICOM Radio Control (MRC) application software requires a personal computer running Microsoft Windows® 2000 and later versions (including Windows® XP).

Windows must be able to run properly on the computer before the MRC application is installed.

Additional minimum requirements include:

- Monitor: minimum resolution of 800x600, and at least 256 colors.

NOTE

MRC screens are designed to fill the screen at the 800x600 resolution, and will display properly with 256 colors. However, higher resolutions and color depth can be used.

- Free hard disk space of at least 12 Mbytes
- One CD drive
- One serial communication port (COM1 or COM2; using an USB edge port, which adds 4 serial ports, increases the range of ports that can be used to COM1 to COM6)
- A mouse.

A printer is also recommended, because it may be used to generate hardcopies of radio configuration data, and other files created by the MICOM Radio Control application.

2-2. BEFORE YOU START ...

To install and use the MICOM Radio Control application, you need a basic working knowledge of Microsoft Windows.

If you are new to the Windows operating environment, take the opportunity to learn Windows fundamentals – using the mouse, working with windows, and opening and closing documents – before you begin to work with the MICOM Radio Control application.

You may find the required information in the Windows User's Reference Guide for your Windows version, available from Microsoft. See also Chapter 3.

2-3. INSTALLATION PROCEDURE

2-3.1 Before Starting the Installation

1. If necessary, turn the computer on and wait until Windows starts.
2. Before starting the installation, make sure to close any other application.

2-3.2 To Install the MICOM Radio Control Application


The MICOM Radio Control application is installed on the InstallShield Utility, using its Wizard interface.

Follow the instructions on the screen to install the MICOM Radio Control application. Accept the defaults unless you have special reasons to change installation parameters.


NOTE

Make sure to note the installation location.


1. Insert the CD with the MICOM Radio Control application in the computer's CD drive.
2. Open the Windows **Start** menu, and select **Run**.
3. Click the **Browse** button, display the files in the CD root directory, and find the file **MRCsetup.exe**.
4. Double-click on the file name: the name will be copied to the **Open** field.
5. Click the **OK** button in the **Run** window: the installation process starts.

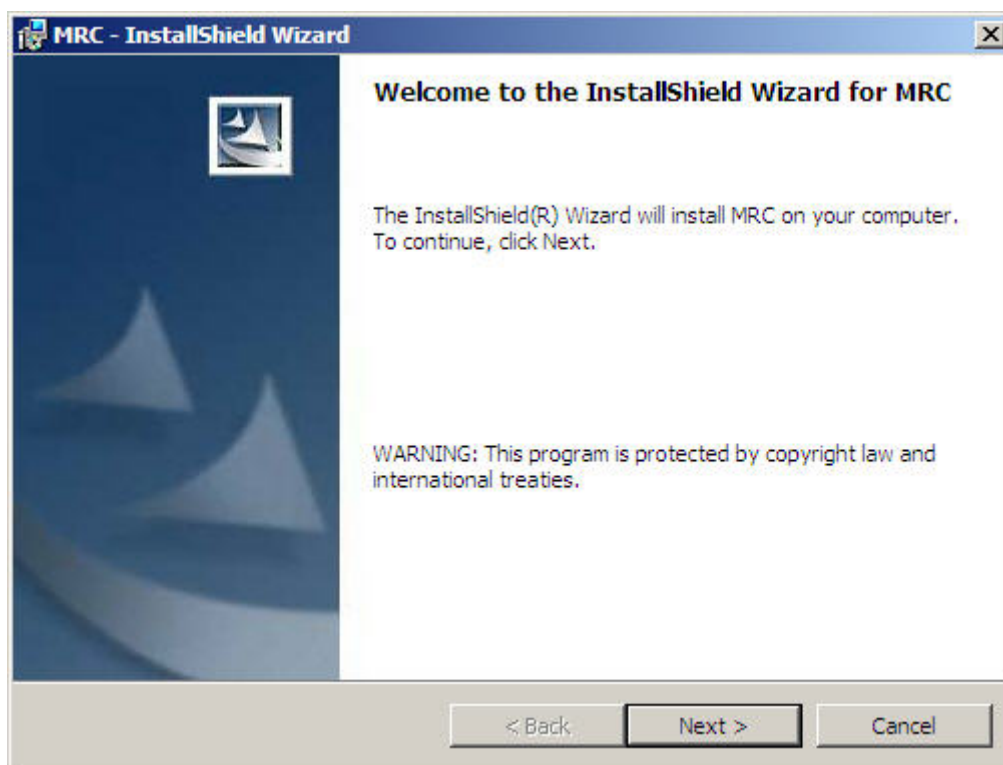


6. Select the destination folder.

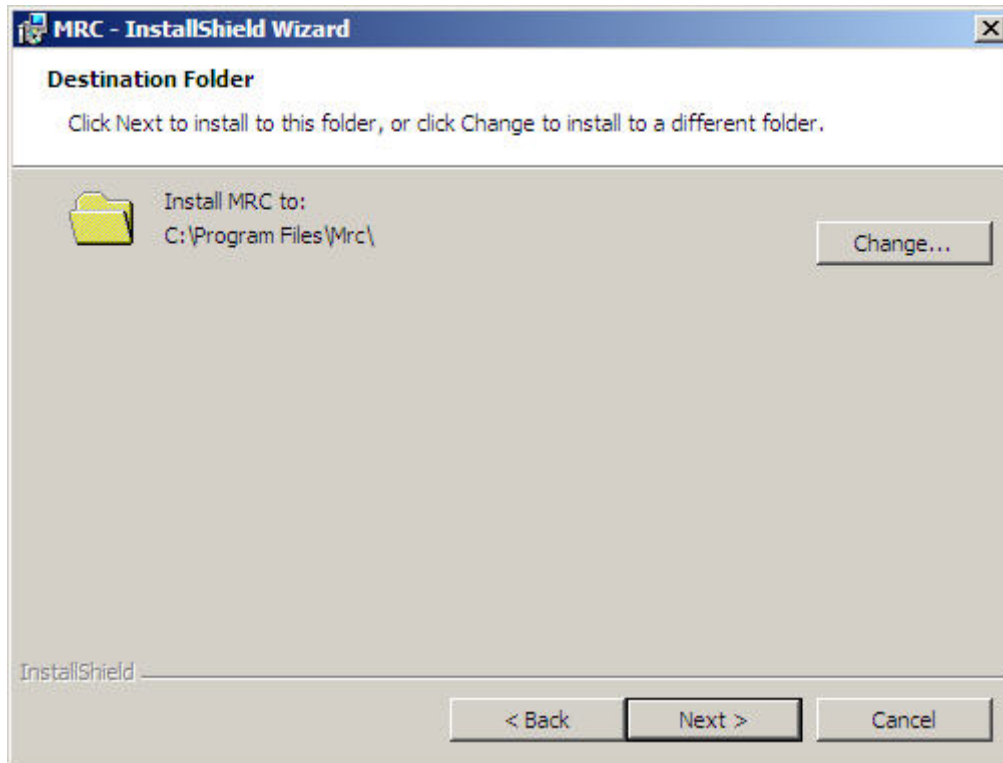

7. After confirming the destination folder, the InstallShield utility starts installing the MRC, and you can monitor the progress.

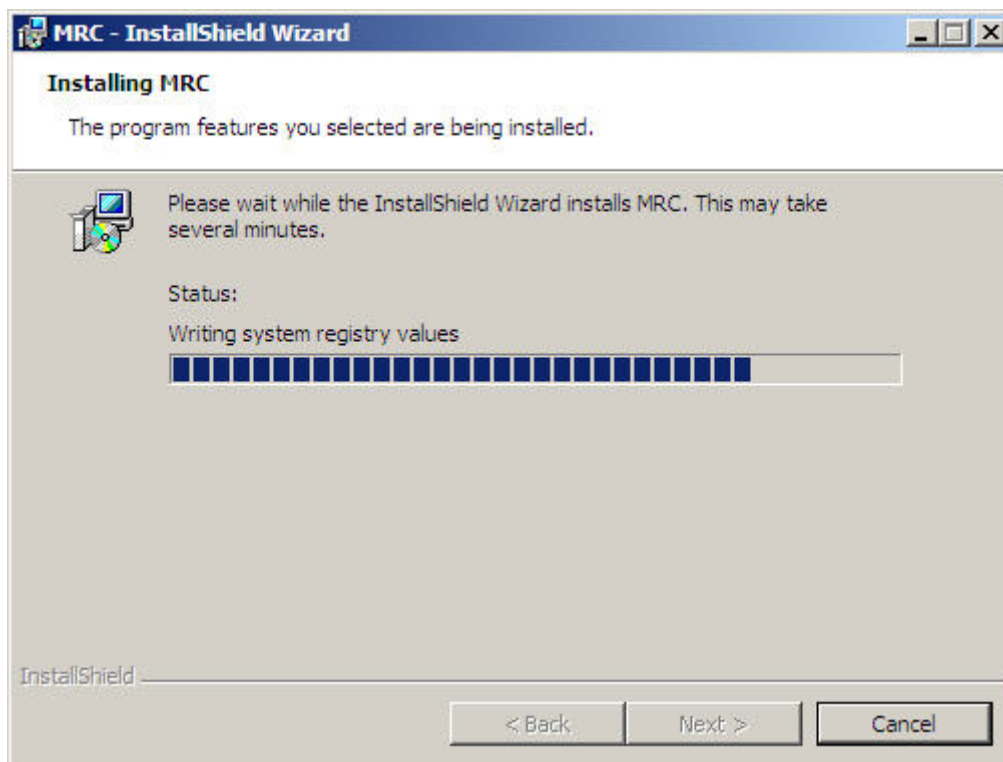

8. When done, you will be notified that the installation has been successfully completed.

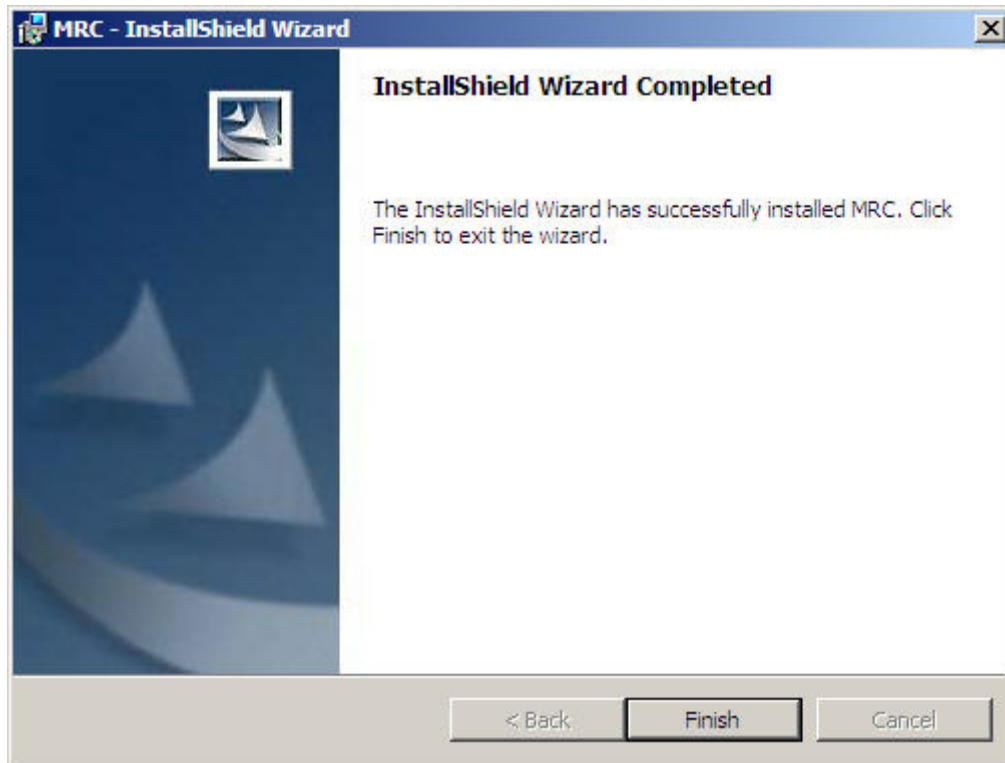

9. After the installation is successfully completed, an MRC icon will be placed on your desktop. 
10. Before continuing, remove the installation CD from the computer's CD drive. It is recommended to restart your computer.

This completes MICOM Radio Control application installation.


2-3.3 To Test for Proper Installation

Double-click the MRC icon: the MICOM Radio Control application will start. Before the main window is displayed, you will see a logo screen that displays the name and version of the MICOM Radio Control application.

NOTE

After being started, the MICOM Radio Control application displays the Computer Interface Panel window, and tries to establish communication with a MICOM radio, which is possible only when a radio is connected as explained in para. 3-2. Therefore, ignore any messages that may be displayed.

To end the application, select **Exit** on the **File** menu.

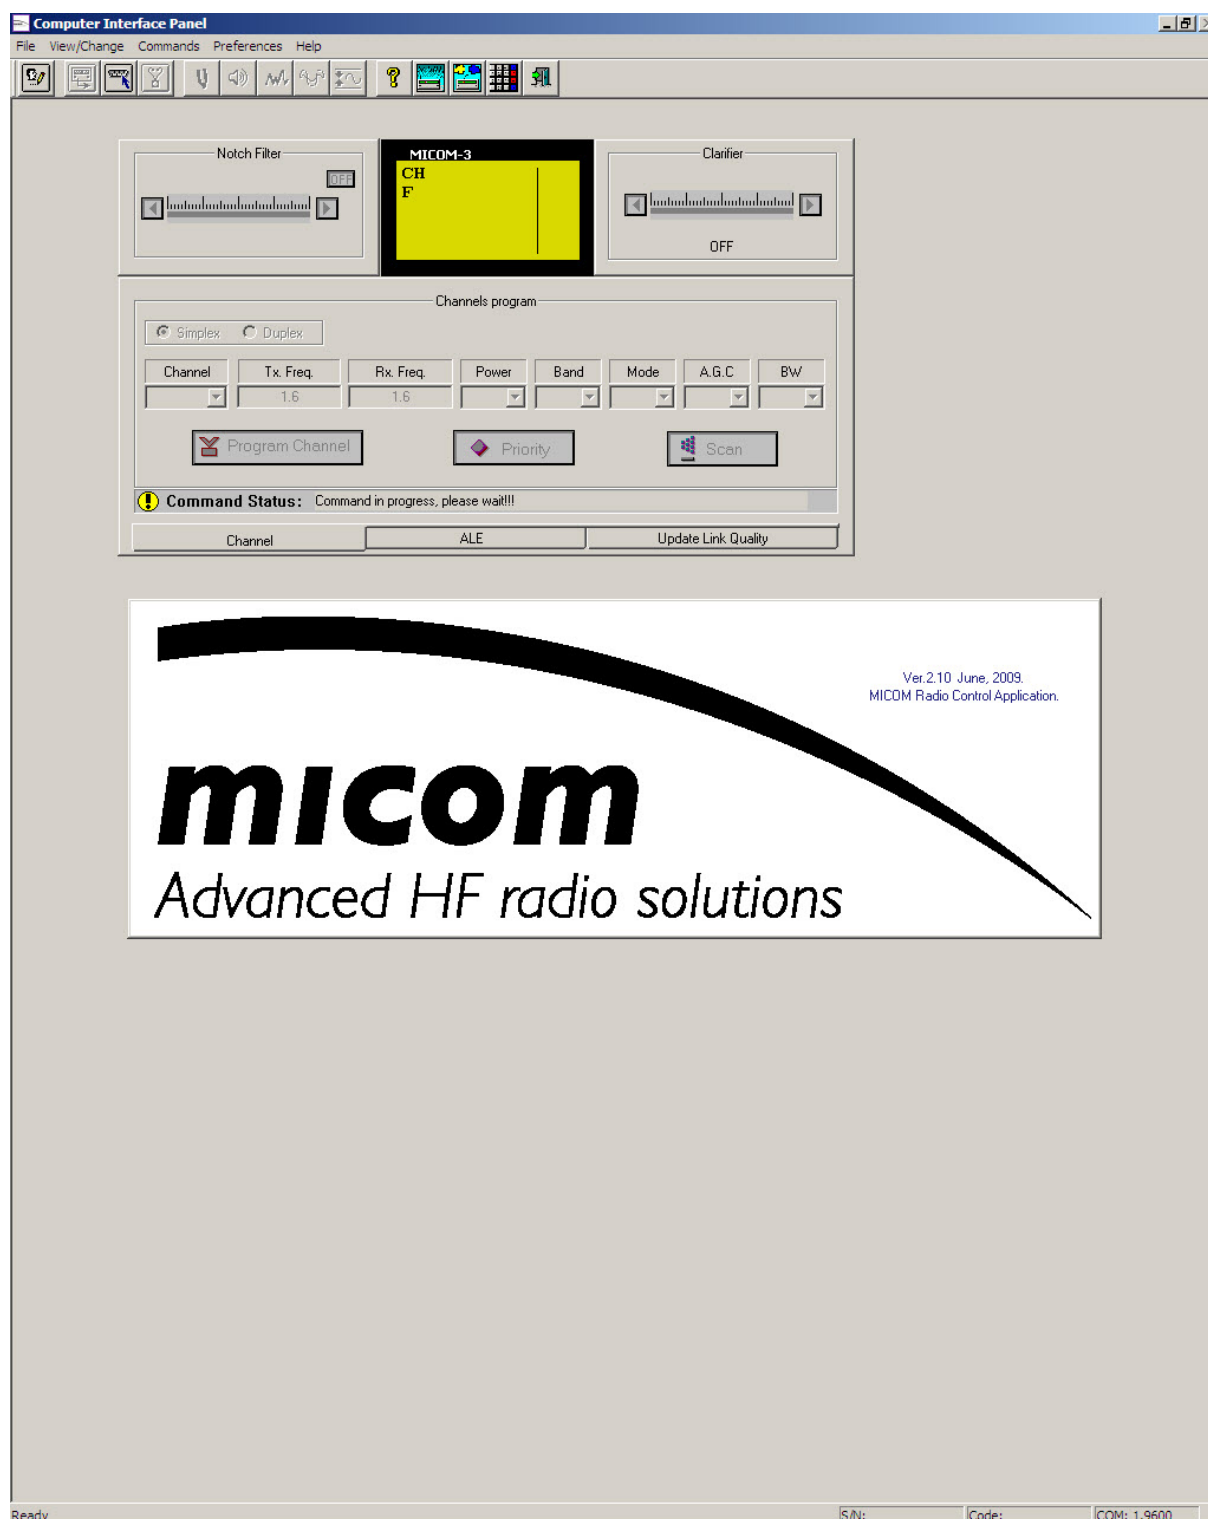

Intentionally Left Blank

CHAPTER 3

GETTING STARTED

3-1. BEFORE YOU BEGIN WORKING

If you are not familiar with using the mouse or keyboard, or with choosing commands in Windows, first read the information in para. 3-3.

If you are familiar with Windows, use para. 3-2 to start working.

3-2. QUICK START


3-2.1 Preliminary Steps

Skip Steps 1, 2, 5 if you intend to work off-line (without connecting to a radio).

1. Connect the supplied cable from the 44-pin accessories connector of the radio to a serial communication port of the computer. You may use any free port in the range of COM1 to COM6.
2. Turn the radio on.
3. Start the MICOM Radio Control application, for example, by double-clicking its icon.
4. After application starts, it displays the **Computer Interface Panel** (Chapter 4), and then attempts to read the radio database. If you are using any port except the default (COM1), this will fail and you must first configure the required port as explained in para. 3-2.2 below.
5. If the connection to the radio is successfully made, wait for its databases to be read. The **Computer Interface Panel** window is then updated with the current radio state.
6. You may now change the MICOM Radio Control function (panel): open the View/Change menu of the **Computer Interface Panel** window and click the desired panel name.
7. For the **RSS Panel**, **RSS ALE Panel** and **CCIR panel** (option), you may use the Open item on the File menu to load a desired parameters file from the computer disk.

3-2.2 Communication Port Configuration

1. In the **Computer Interface Panel** window (or any panel you have opened), open the Preferences menu and click the Comm Ports item.
2. Make the required selections in the **Communication Ports** dialog box, and then click **OK** to confirm.

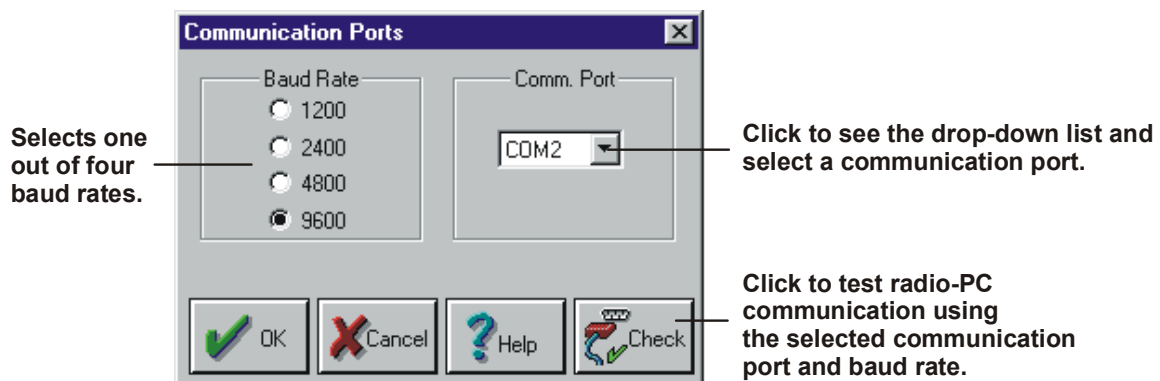

3-3. GENERAL PROCEDURES

You can use the keyboard or the mouse to carry out any action in the MICOM Radio Control application. If you are not familiar with using the mouse or keyboard, or with choosing commands in Windows, read the following information.

3-3.1 Menus and Commands

Choosing a command tells the MICOM Radio Control application what to do next: to load parameters from the radio, to program radio parameters, and so on. Commands that carry out similar actions are grouped on a menu. For example, the **File** menu contains commands you use to load, save and print the radio parameters. The menus are listed on the menu bar at the top of the MICOM Radio Control application window.

You can use the mouse or the keyboard to display the commands on each menu. To open the menus and browse through the commands, drag across the menu bar with the mouse, or press the ALT key, and then press the underlined letter in the name of the menu you want to open.

The MICOM Radio Control application carries out some commands right away. If more information is needed to complete a command, the MICOM Radio Control application displays a dialog box. You select options in the dialog box to control how the command is carried out.

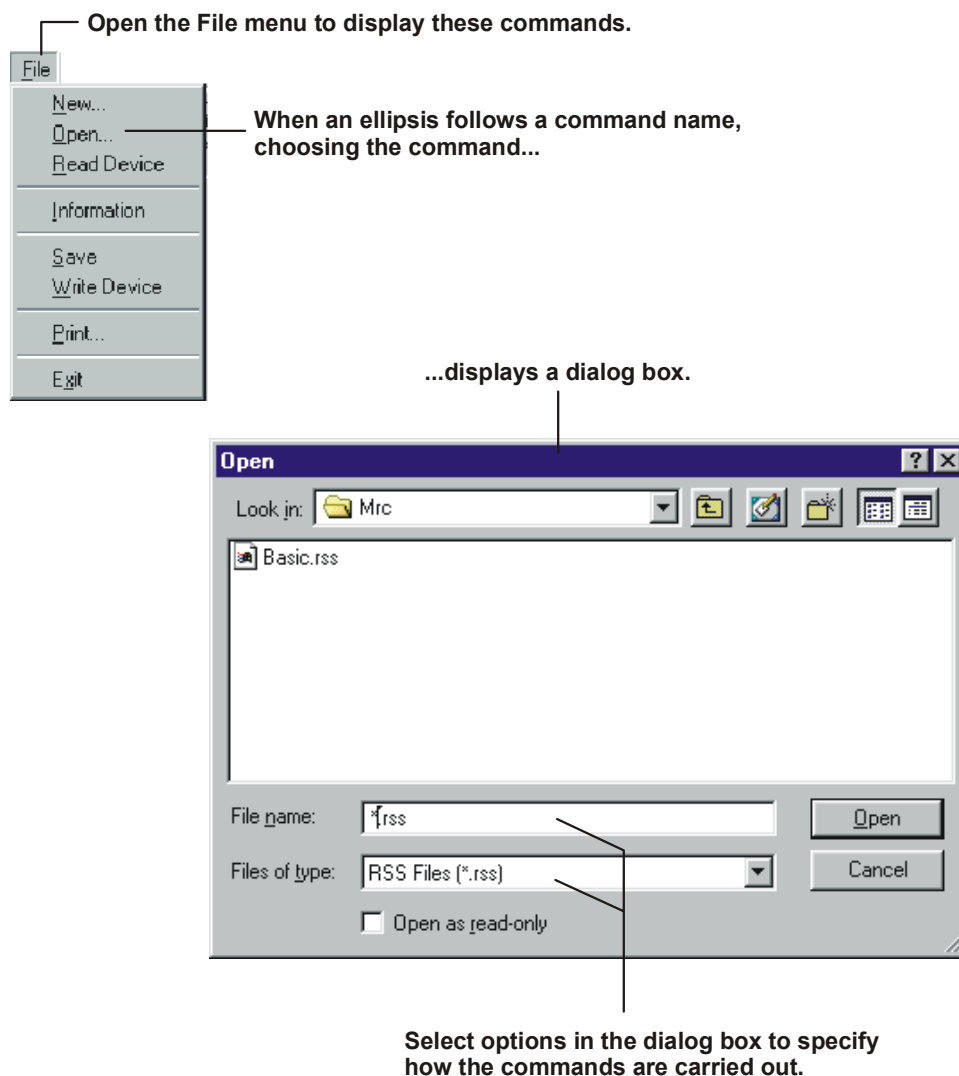


Figure -1. Typical File Menu and Open Dialog Box

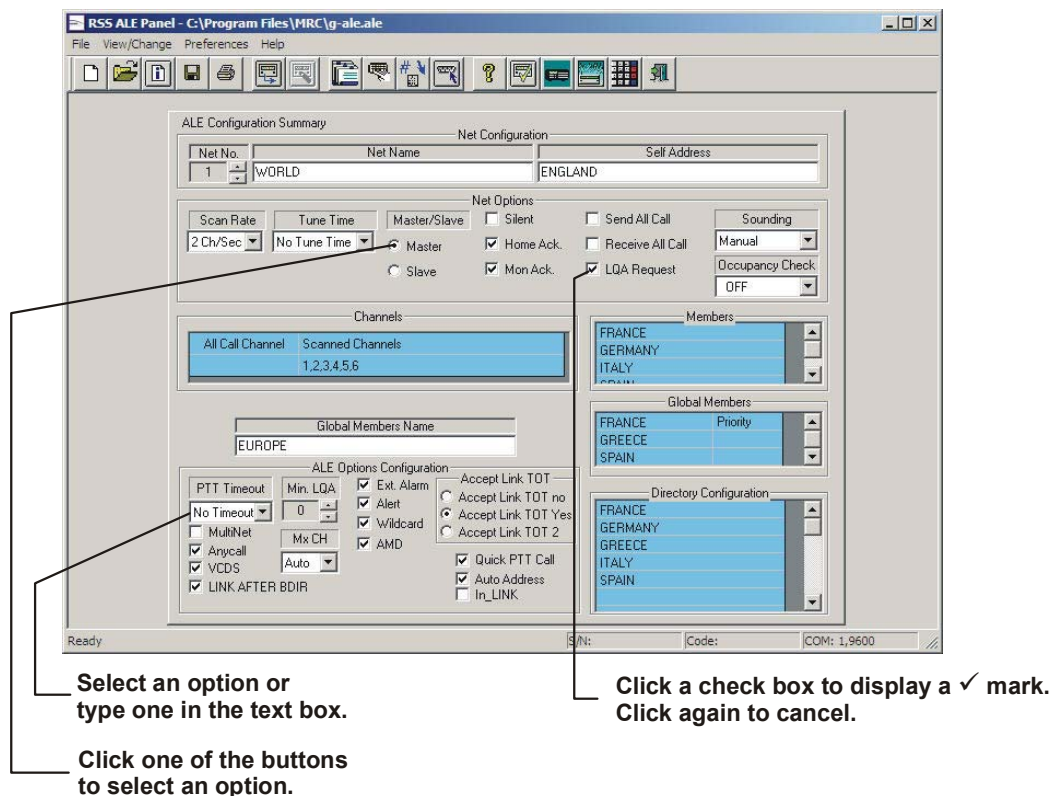
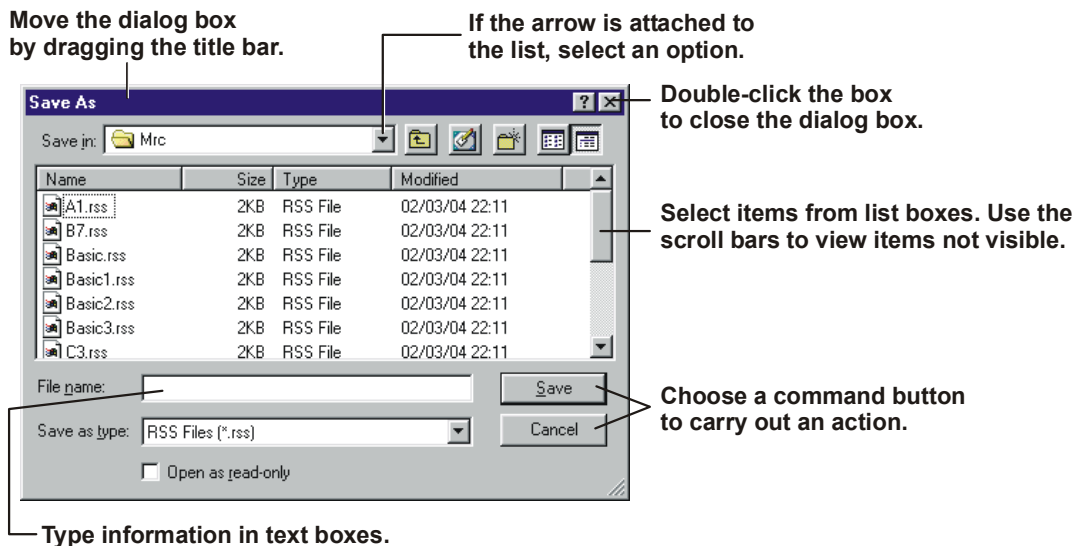


Figure -2. Dialog Box Options

3-3.2 MICOM Radio Control Application Windows

This section describes the main elements of the MICOM Radio Control application windows and introduces terms used in this documentation.

The MICOM Radio Control application has the following main functions, each displaying a different panel:

- **Computer Interface Panel:** enables controlling the MICOM-3 radio from a remote or local location, using a personal computer. This is the panel that opens when you start the MICOM Radio Control application.
- **RSS Panel:** used to program the features and operational parameters of the radio for operation in all the modes except ALE.

NOTE

A somewhat different RSS panel, referred to as the **RSS CCIR Panel**, is used when the radio includes the CCIR option.

- **RSS ALE Panel:** used to program the features and operational parameters of the radio for operation in the ALE mode.
- **CCIR Panel:** used to program the features and operational parameters of the radio needed to use the CCIR digital selective calling option.
- **MICOM Panel:** mimic of the MICOM-3 or MICOM-2 panel for directly controlling the radio using the computer mouse and keyboard.

3-3.2.1 Panel Elements

Each panel has the following elements (from top to bottom):

- Header – standard Windows window header, displays the panel name
- Menu bar – depends on the open panel
- Toolbar – depends on the open panel
- Work area – displays various windows (for example, a control panel), and dialog boxes
- Status bar.

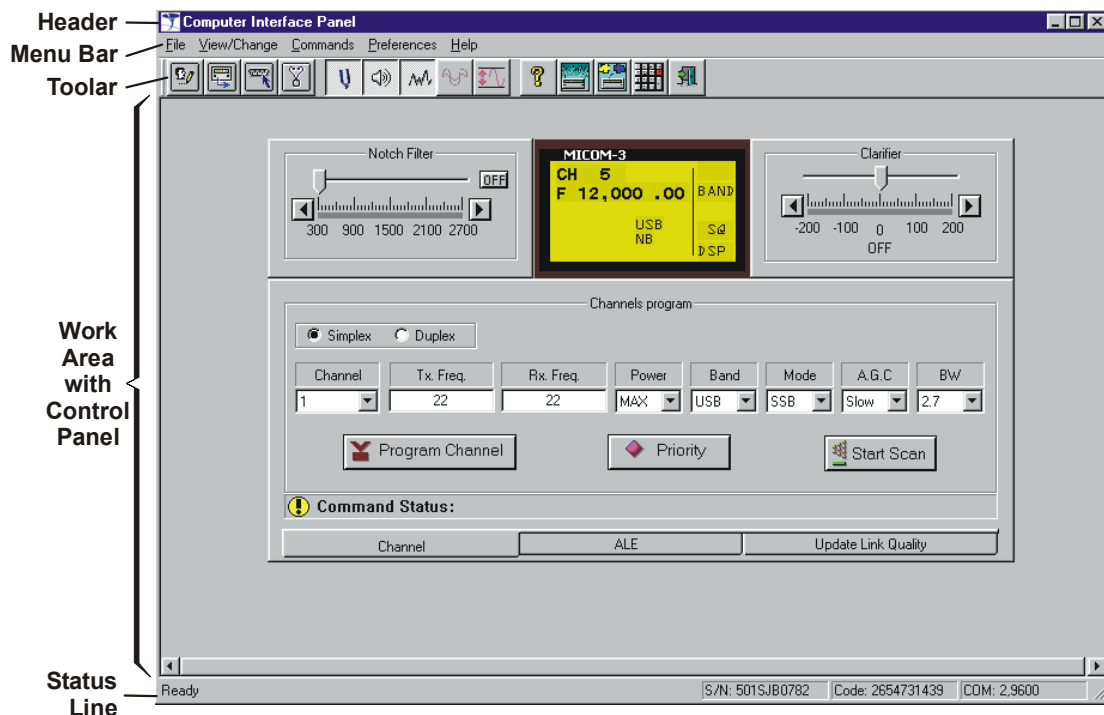


Figure -3. Elements of MICOM Radio Control Application Panels

3-3.3 The Menu Bars

The MICOM Radio Control application commands are listed on menus. The menus are listed on the menu bar along the upper edge of the application window: select (highlight) a menu and then choose a command from that menu. Choosing the command carries out the action.

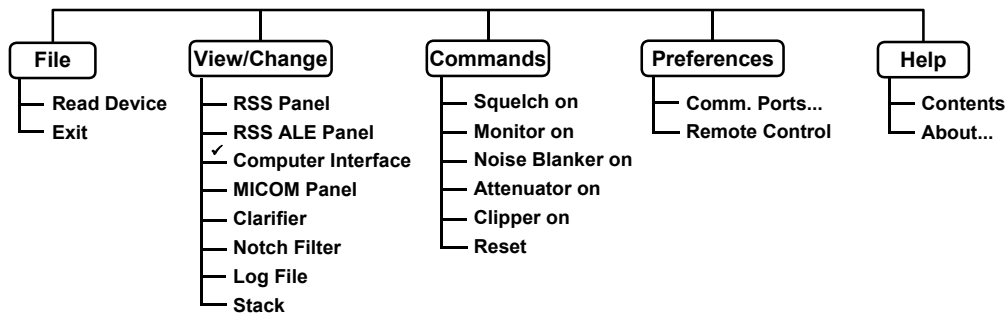


Figure -4. Computer Interface Panel Menu Bar

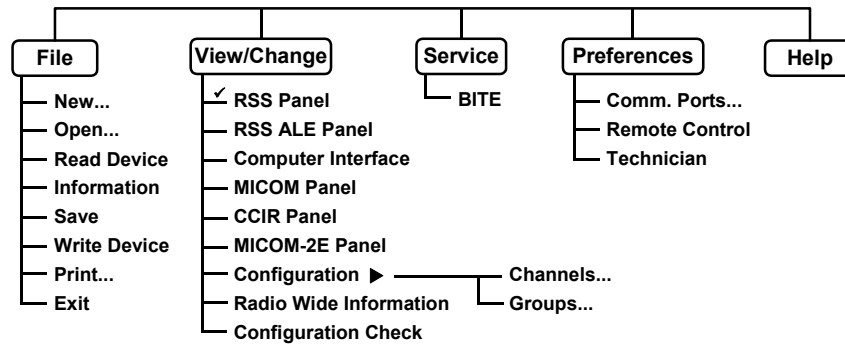


Figure -5. RSS Panel Menu Bar

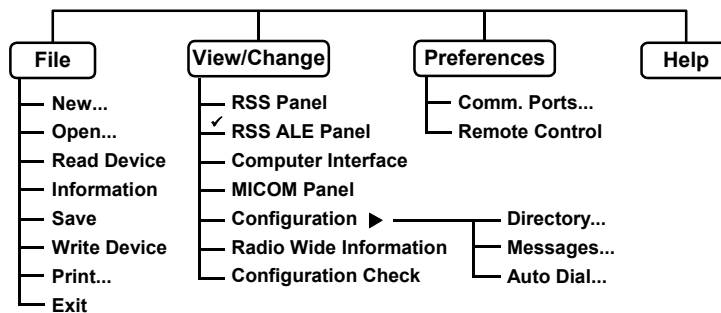


Figure -6. RSS ALE Panel Menu Bar

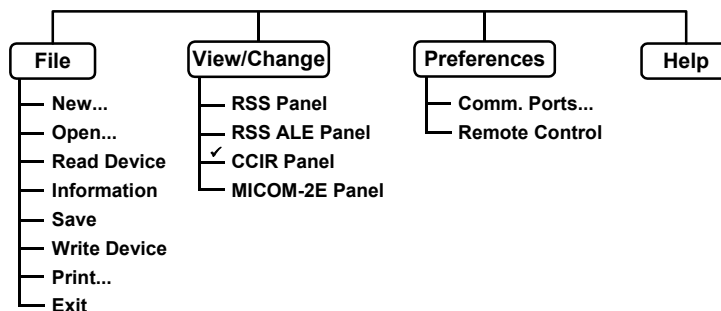


Figure -7. CCIR Panel Menu Bar

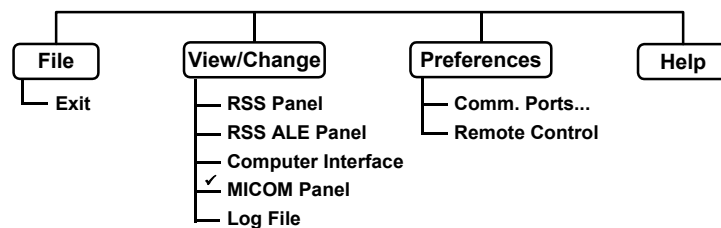


Figure -8. MICOM Panel Menu Bar

3-3.4 The Toolbars

The Toolbar, displayed just below the menu bar, has buttons that provide quick access to commonly used commands. The button background changes when clicked, to indicate the corresponding command is active. When the pointer is located on the bottom edge of each toolbar button, the button name appears underneath it. At the same time, the help prompt in the bottom status line is updated.

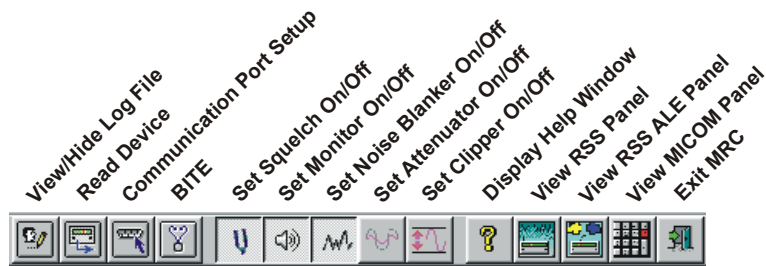


Figure -9. *Computer Interface Panel* Toolbar

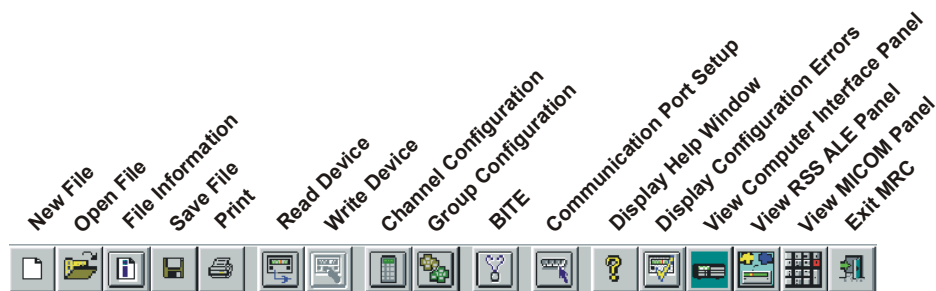


Figure -10. *RSS Panel* Toolbar



Figure -11. *RSS ALE Panel* Toolbar

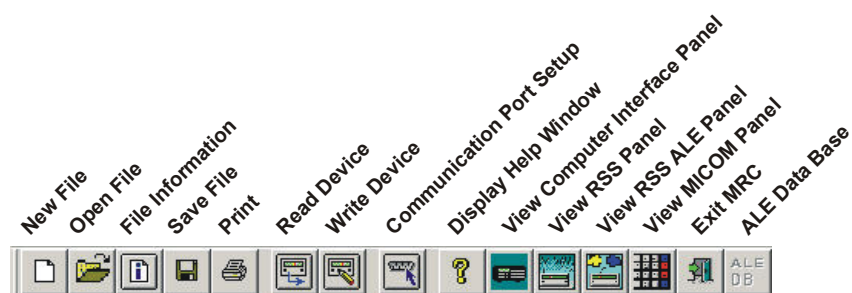


Figure -12. *CCIR Panel* Toolbar

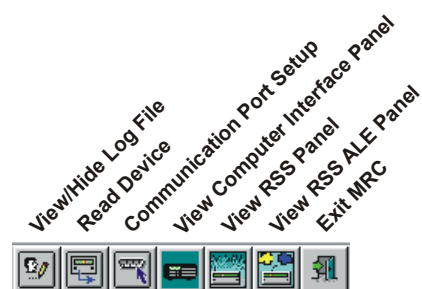


Figure -13. *MICOM Panel* Toolbar

3-3.5 The Status Line

The status line at the bottom of the application window provides information about the radio and the PC parameters. It also displays a short help item for the item that is currently in focus on the screen.

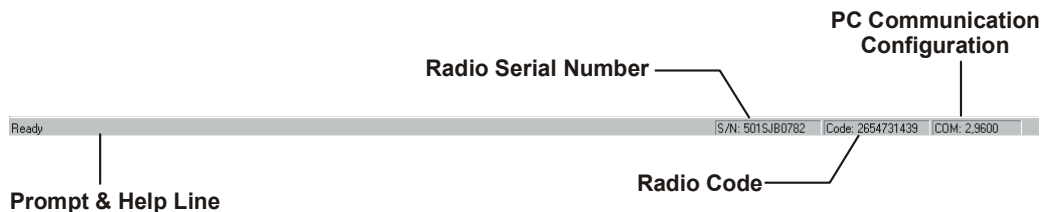


Figure -14. The Status Line

3-3.6 Other Important Considerations

3-3.6.1 Read Device Database upon Starting

When starting the MICOM Radio Control application, it displays the Computer Interface Panel window, and then tries to establish communication with a MICOM-3 radio (this is however possible only when a radio is connected).

If you start the application without first connecting a MICOM-3 radio, make sure to upload the radio database (using the Read Device function) as soon as you connect a radio to the PC.


After uploading the database, the MICOM Radio Control application will use the existing radio parameters as the starting point for any changes you do. This is especially important when making configuration changes, because the Write Device function downloads only the parameters that have been changed during the current session. If the starting point is not the database uploaded from the radio you want to configure, undesirable changes may be introduced in the radio configuration.

3-3.6.2 Using the Radio Keypad while in Session with MICOM Radio Control Application

The default with MICOM Radio Control parameters allow using the radio keypad while the radio is connected to the PC. Despite the convenience of this feature, be careful: you may change the operating parameters from the keypad, but the application is not aware of such changes and will not display the new radio state until the Read Device function is used.

Therefore, it is your responsibility to update the MICOM Radio Control whenever you change the radio operating mode from its keypad, otherwise conflicts and configuration errors may occur.

If communication cannot be established, you will see a message box. Click **OK** to confirm and continue using the MRC in the off-line mode.

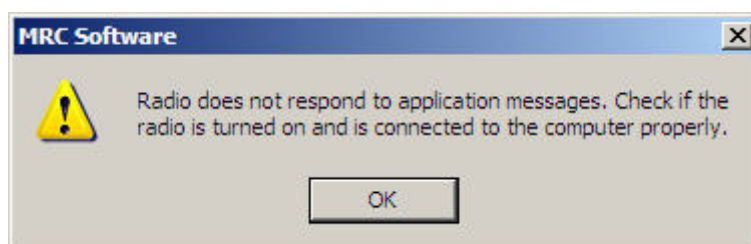


Intentionally Left Blank


CHAPTER 4

OPERATING INSTRUCTIONS

4-1. RSS PANEL

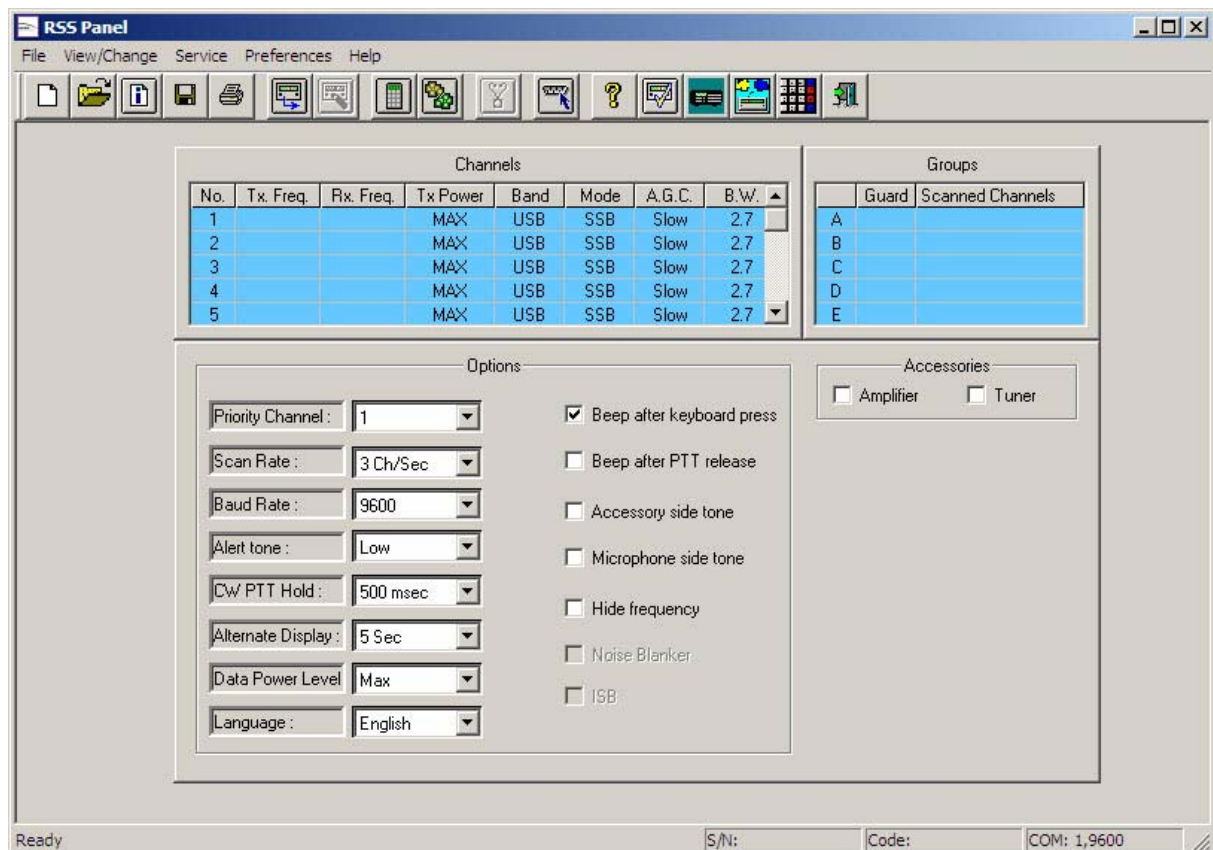

4-1.1 RSS Panel Menus

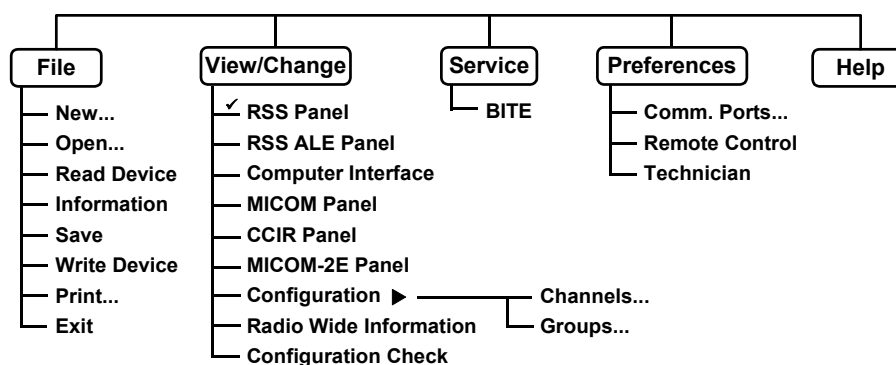

4-1.1.1 File Menu

Item	Function
New	Create a new radio parameter data base, according to the present mode
Open	Open an existing radio parameter file. The MICOM Radio Control application displays the Open dialog box, where you can locate and open the file you want.
Read Device	Load parameters from the radio
Information	Display information on the radio parameter file.
Save	Save the active radio parameter data base with its current name. If you have not named the data base, the MICOM Radio Control application displays the Save As dialog box for you to do so.
Write Device	Program the radio parameters. When there are configuration errors, the Write Device button is grayed and the Configuration Check button is highlighted, and vice versa when the configuration is free of errors.
Print	Print the current loaded radio parameters.
Exit	End the MICOM Radio Control application

4-1.1.2 View/Change Menu

Item	Function
RSS Panel	Open the RSS Panel
RSS ALE Panel	Open the RSS ALE Panel
Computer Interface	Open the Computer Interface Panel
MICOM Panel	Open the MICOM Panel
CCIR Panel	Open the CCIR Panel (not active for the RSS Panel)
MICOM-2E Panel	Open the MICOM-2E Panel (not active when connected to MICOM-3)
Configuration	Display the Configuration submenu used to configure the channel parameters and define scan channel groups
Radio Wide Information	Displays a summary of the radio hardware and software configuration
Configuration Check	Display the list of configuration errors. When there are no configuration errors, this item is grayed


4-1.1.3 Service Menu

Item	Function
BITE	Perform radio built in tests

4-1.1.4 Preferences Menu

Item	Function
Comm. Ports...	Configure the computer serial port communication parameters
Remote Control	Enable/disable radio panel keypad
Technician	Provides instructions for authorized technicians to install an MRC version supporting MICOM-2E radio sets

4-1.1.5 RSS Panel Toolbar Buttons

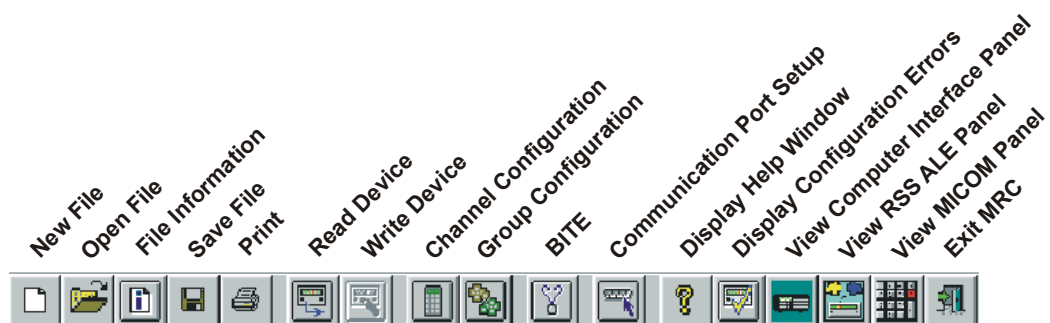

Button	Name	Function
	New	Create a new radio parameter data base, according to the present mode
	Open	Open an existing radio parameter file. The MICOM Radio Control application displays the Open dialog box, where you can locate and open the *.rss file you want.
	Information	Display information on the radio parameter file.
	Save	Save the active radio parameter data base with its current name. If you have not named the data base, the MICOM Radio Control application displays the Save As dialog box for you to do so.
	Print	Print the current loaded radio parameters.
	Read Device	Load parameters from the radio
	Write Device	Program the radio parameters. When there are configuration errors, the Write Device button is grayed and the Configuration Check button is highlighted, and vice versa when the configuration is free of errors.
	Channel Configuration	Select the channel parameters. The MICOM Radio Control application displays the Channel Configuration dialog box, where you can select the parameters for each radio channel
	Group Configuration	Select the group parameters. The MICOM Radio Control application displays the Group Configuration dialog box, where you can select the scanned channels for each group
	BITE	Perform radio built in test. The MICOM Radio Control application displays the Built-in Test Equipment dialog box, where you can select the type of test you want to perform
	Communication Ports	Select the baud rate and the serial communication port. The MICOM Radio Control application displays the Communication dialog box, where you can make the selection
	Help	Display on-line help
	Configuration Check	Display the errors in the configuration. When there are no configuration errors, this button is grayed
	Computer Interface Panel	Open the Computer Interface Panel

Button	Name	Function
	RSS ALE Panel	Open the RSS ALE Panel
	MICOM Panel	Open the MICOM Panel
	Exit	End the MICOM Radio Control application

4-1.2 Radio Configuration Summary Window

Channels								Groups		
No.	Tx. Freq.	Rx. Freq.	Tx Power	Band	Mode	A.G.C.	B.W.		Guard	Scanned Channels
1	2	2	MAX	USB	SSB	Slow	2.7	A		
2	3	3	MAX	USB	SSB	Slow	2.7	B		
3	5	5	MAX	USB	SSB	Slow	2.7	C		
4	8	8	MAX	USB	SSB	Slow	2.7	D		
5	12	12	MAX	USB	SSB	Slow	2.7	E		

Options		Accessories	
Priority Channel :	1	☒ Beep after keyboard press	☐ Amplifier
Scan Rate :	2 Sec/Chan	☒ Beep after PTT release	☐ Tuner
Baud Rate :	9600	☐ Accessory side tone	
Alert tone :	High	☒ Microphone side tone	
Cw PTT Hold :	150 msec	☐ Hide frequency	
Alternate Display :	5 Sec	☐ Noise Blanker	
Data Power Level	Max	☒ ISB	
Language :	English		

4-1.2.1 Channels Field

Channels							
No.	Tx. Freq.	Rx. Freq.	Tx Power	Band	Mode	A.G.C.	B.W.
1	14	14	LOW	LSB	SSB	Off	2.7
2	3	3	MAX	USB	SSB	Slow	2.7
3	5	5	MAX	USB	SSB	Slow	2.7
4	14	14	MAX	USB	SSB	Slow	2.7
5	12	12	MAX	USB	SSB	Slow	2.7

Item	Parameter
No	Channel number
Tx. Freq	Transmit frequency (MHz). Frequency range: 1.6 MHz - 30 MHz. Resolution: 10 Hz
Rx. Freq	Receive frequency (MHz). Frequency range 100 KHz - 30 MHz. Resolution: 10 Hz
Tx.	Transmit power level: low, medium, high or maximum.
Band	Sideband: Upper Side Band or Lower Side Band
Mode	The carrier reinsertion level: SSB (Single Sideband), PLT (Pilot Mode) and AME (Amplitude Modulation Equivalent).
A.G.C	Automatic (Receive) Gain Control operation: slow, fast or off.
B.W.	Channel bandwidth

4-1.2.2 Groups Field

The following table lists the parameters of the Groups field in the **Radio Configuration Summary Window**:

Groups		
	Guard	Scanned Channels
A		
B		
C		
D		
E		

Item	Parameter
None	Group designation letter
Guard	The group guard channel
Scanned Channels	The channels scanned in a particular group. When the channel numbers are followed by an ellipsis (...), there are more scanned channels than the display allows, and you have to open the Groups dialog box to see all the channels in the group

4-1.2.3 Options Field

The screenshot shows a software interface for configuring a radio. It features two main panels: 'Options' and 'Accessories'. The 'Options' panel contains eight dropdown menus and seven checkboxes. The 'Accessories' panel contains two checkboxes. The 'Options' panel is titled 'Options' and the 'Accessories' panel is titled 'Accessories'.

Parameter	Description
Priority Channel	The channel, 1 to 200, the radio switches to by pressing the priority button on the front panel
Scan Rate	The number of channels scanned each second when the radio is in ALE mode can be set to 2 or 5 channels per second
Baud Rate	Radio serial communication baud rate (1200, 2400, 4800, 9600 bps)
Alert Tone	The radio speaker alert tone level: low or high
CW PTT Hold	The time which elapses between the moment you release the PTT button until the radio stops the transmission: 150 msec, 500 msec
Alternate Display	Select the alternate display time-out, that is, the time after which a keypad sequence is automatically aborted in case no action is taken. In this case, the display returns to the previous screen. The time-out interval can be selected in the range of 1 to 10 seconds
Data Power	The transmit data power (non audio). The nominal transmit data power of the radio will not exceed the transmit power level. If the selected data power level is higher than the transmit power level, the radio will automatically cut back the data power
Language	English, French, Spanish, Bahasa The language used on the MICOM-3 display. The default language is English, however you also select French, Spanish or Bahasa
Beep after keyboard	Enables/disables sounding a beep after each keyboard press
Beep after PTT release	Enables/disables sounding a beep on the remote radio after each PTT release
Accessory side tone	Enable/disable the sidetone when you transmit using an accessory connected through the rear panel
Microphone side tone	Enable/disable the sidetone when you transmit using the microphone
Hide Frequency	Disables the radio frequency display
Noise Blanker	Enables/disables the noise blanker
ISB	Read-only indicator for a device that supports the ISB feature

Parameter	Description
Priority Channel	The channel, 1 to 200, the radio switches to by pressing the priority button on the front panel
Scan Rate	The number of channels scanned each second when the radio is in ALE mode can be set to 2 or 5 channels per second
Baud Rate	Radio serial communication baud rate (1200, 2400, 4800, 9600 bps)
Alert Tone	The radio speaker alert tone level: low or high
CW PTT Hold	The time which elapses between the moment you release the PTT button until the radio stops the transmission: 150 msec, 500 msec
Alternate Display	Select the alternate display time-out, that is, the time after which a keypad sequence is automatically aborted in case no action is taken. In this case, the display returns to the previous screen. The time-out interval can be selected in the range of 1 to 10 seconds
Data Power	The transmit data power (non audio). The nominal transmit data power of the radio will not exceed the transmit power level. If the selected data power level is higher than the transmit power level, the radio will automatically cut back the data power
Language	English, French, Spanish, Bahasa The language used on the MICOM-3 display. The default language is English, however you also select French, Spanish or Bahasa
Beep after keyboard	Enables/disables sounding a beep after each keyboard press
Beep after PTT release	Enables/disables sounding a beep on the remote radio after each PTT release
Accessory side tone	Enable/disable the sidetone when you transmit using an accessory connected through the rear panel
Microphone side tone	Enable/disable the sidetone when you transmit using the microphone
Hide Frequency	Disables the radio frequency display
Noise Blanker	Enables/disables the noise blanker
ISB	Read-only indicator for a device that supports the ISB feature

4-1.2.4 Accessories Field

Parameter	Description
Amplifier	The radio is configured to work with an external power amplifier
Tuner	The radio is configured to work with tuner

4-1.3 Radio Wide Information Window

The *Radio Wide Information* window provides a summary of the radio hardware and software configuration, for view only.

It contains four information fields: Radio Model, Radio Options List, ECN List and SP List.

Radio Model		Radio Options List			
Serial No.	501SJB0782	Option	S/W Ver.	H/W Ver.	Status
Radio Code	2654731439	High Stability Oscillator	02.0010	01.0000	Disabled
Software Ver.	03.5700	Delete LSB	02.0010	01.0000	Disabled
Hardware Ver.	03.0000	Noise Blanker	02.0010	01.0000	Enabled
C.H. S/W Ver.	02.002	Remote Control	02.1400	01.0000	Disabled
C.H. H/W Ver.	04.002	SelfCall			Disabled
		Delete ALE	03.0000	01.0000	Disabled
		Delete Data			Disabled
		Accessory Stop Scan	03.1950	01.0000	Disabled
		E.C.N. List			
		S.P. List			

Figure -1. Radio Wide Information Window

The following table lists the parameters of the Radio Model field in the **Radio Wide Information Window**:

Parameter	Description
Serial No.	The radio serial number. Also appears on the Status line
Radio Code	The radio specific factory identification code. Also appears on the Status line
Software Ver.	The radio software version
Hardware Ver.	The radio hardware version
C.H. SW Ver.	The radio control head software version
C.H. HW Ver.	The radio control head hardware version

The Radio Options List in the **Radio Wide Information Window** contains information on the add-on options installed in the radio. Only the **Enabled** options are active and can be configured.

The E.C.N. List field in the **Radio Wide Information Window**, includes a list of engineering changes performed on the radio.

The S.P. List field in the **Radio Wide Information Window**, includes a list of special products installed in the radio.

4-1.4 Configuration Check Window

The *Configuration Check* window displays an updated list of errors in the configuration parameters, for view only. Each time a dialog box is closed, a validation check is made, updating the error list.

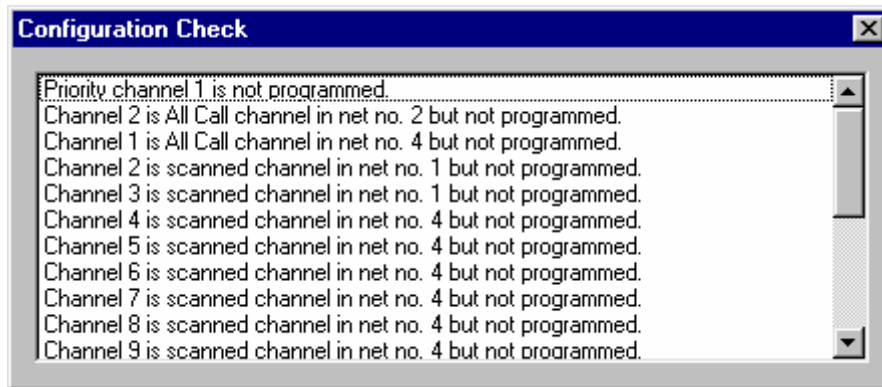


Figure -2. Configuration Check Window

There are three types of errors:

- **Priority channel is not programmed** – the channel selected by pressing the priority button on the front panel is not programmed.
To program this channel, select View/ChangeConfigurationChannels from the Main menu and enter the required data.
- **Guard channel for group is not programmed** – the channel selected as guard channel is not programmed. To program this channel, select View/ChangeConfiguration Channels from the Main menu and enter the required data.
- **Channel in group selected but not programmed** – the channel selected in a group is not programmed. To program this channel, select View/ChangeConfigurationChannels from the Main menu and enter the required data.

NOTE

You cannot program the radio unless the error list is clear.

When there are configuration errors, the *Write Device* command on the File menu and the *Write Device* button on the Toolbar are disabled (grayed). This command remains disabled until the errors are corrected and the list is clear.

In order to draw your attention to the fact that you cannot load radio parameters while there are configuration errors, the *Configuration Check* button on the Toolbar is active and the Configuration Check window comes forward, displaying the error list.

4-1.5 Preferences Menu

4-1.5.1 Communication Ports

The *Comm Ports* command customizes the PC serial communication parameters by selecting the communication port and baud rate.

To perform this operation:

- From the Preferences menu, choose *Comm Ports* (ALT, P, C)
or
- Click the *Comm Ports* button on the toolbar.

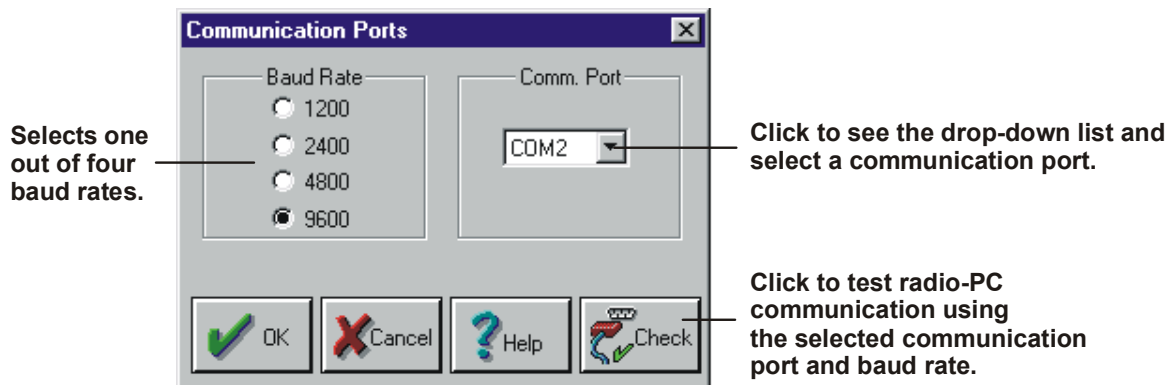


Figure -3. Communication Ports Dialog Box

NOTE

Selecting a baud rate different from the radio's baud rate may cause communication failure.

After selecting OK, the baud rate and communication port are updated on the Status line.

NOTE

Prior to any communication attempt, make sure the programming cable is firmly connected on both the radio and PC side, and that the radio is on.

To verify that the baud rate and communication ports selected enable radio communication, click the Check button on the Communication Ports Dialog Box.

If you selected the wrong baud rate or communication port, a communication failure prompt appears on the screen and you have to select new values.

4-1.6 Read Device

The *Read Device* command enables the user to load a radio configuration file directly from the radio, and is similar to the *Open* command, which enables the user to load a radio configuration file from the disk.

Using the *Read Device* command allows you to load the radio configuration file, perform any required changes, save the configuration and program the radio.

It is advisable to save the configuration file loaded from the radio on the computer disk (use the *Save* command) as a backup file.

4-1.7 Write Device

The *Write Device* command enables the user to program the radio using serial communication interface.

NOTE

If the radio is disconnected or turned off during the Write Device operation, the operation fails and the programming of the radio database will be incomplete. In such a case, the radio communication operates at a baud rate of 1200 bps. To communicate with the radio, the MICOM Radio Control application must be brought to a baud rate of 1200 bps.

When there are configuration errors, the *Write Device* command on the File menu and the *Write Device* button on the Toolbar are disabled (grayed). This command remains disabled until the errors are corrected and the list is clear.

In order to draw your attention to the fact that you cannot load radio parameters while there are configuration errors, the *Configuration Errors* button on the Toolbar is active and the Configuration Check window comes forward, displaying the error list.


4-1.8 Radio Configuration Settings

The *View/Change|Configuration* menu, provides commands to set channel parameters, scanned channel groups, radio options, and accessories configuration.

The functions appearing under the **Configuration** submenu are as follows:

- Channels: To configure channels parameters such as frequencies, transmit power level, receive AGC and the carrier insertion level.
- Groups: To configure the scanned channel groups.

4-1.9 Channels Configuration

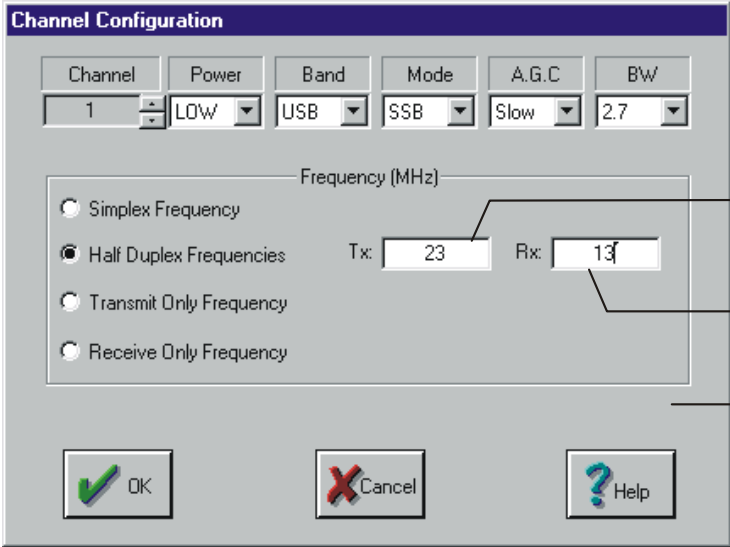

The dialog box is titled "Channel Configuration". It contains several tabs: Channel, Power, Band, Mode, A.G.C, and B'W. The "Channel" tab is active, showing a list of channels with "1" selected. Below the tabs, there are four radio buttons: "Simplex Frequency", "Half Duplex Frequencies", "Transmit Only Frequency", and "Receive Only Frequency". The "Half Duplex Frequencies" option is selected. To the right of these radio buttons are two input boxes labeled "Tx:" and "Rx:". The "Tx:" box contains the value "23" and the "Rx:" box contains the value "13". Above these boxes is a label "Frequency (MHz)". At the bottom of the dialog box are three buttons: "OK" (with a green checkmark icon), "Cancel" (with a red X icon), and "Help" (with a blue question mark icon). Three callout lines point to the "Tx:" and "Rx:" boxes, with labels: "Type the transmit frequency", "Type the receive frequency", and "Reports wrong frequency".

Figure -4. Channel Configuration Dialog Box


Parameter	Definition
Channel No.	The channel number you want to configure. You may type the number in the box. or click the vertical scroll and choose from the list.
Power	Transmit power level. Select from the list.
Band	The type of sideband transmission. Select from the list.
Mode	The carrier reinsertion level. Select from the list.
AGC	The Automatic (Receive) Gain Control mode. Select from the list.
B.W.	The filter bandwidth. Select from the list.
Simplex Frequency	The radio transmits and receives on the same frequencies. When you click this option, a box appears to type the required frequency (MHz). Frequency range: 1.6 MHz - 30 MHz, Resolution: 10 Hz
Half Duplex Frequencies	The radio transmits and receives on different frequencies. When you click this option, two boxes appear to type the required transmit (Tx) and receive (Rx) frequency (MHz). Transmit range: 1.6 MHz - 30 MHz Receive range; 0.1 MHz - 30 MHz
Transmit Only Frequency	The radio acts as a transmitter only. When you click this option, a box appears to type the required transmit frequency (MHz). Transmit range: 1.6 MHz - 30 MHz, Resolution: 10 Hz
Receive Only Frequency	The radio acts as a receiver only. When you click this option, a box appears to type the required receive frequency (MHz). Receive range: 0.1 MHz - 30 MHz, Resolution: 10 Hz

The frequency error line is updated while you type the required frequency. You cannot press OK and close the Channel Configuration dialog box, or pass on to another channel while the frequency box is empty (the channel is not programmed), or the typed frequency is faulty.

The Radio Configuration Summary window is updated automatically, following the changing or entering of new parameters into the Channel Configuration dialog box.

4-1.10 Groups

MICOM-3 enables programming and operating of up to 200 channels. The *Groups* command enables the user to view and edit the configuration of the scanned channel groups.

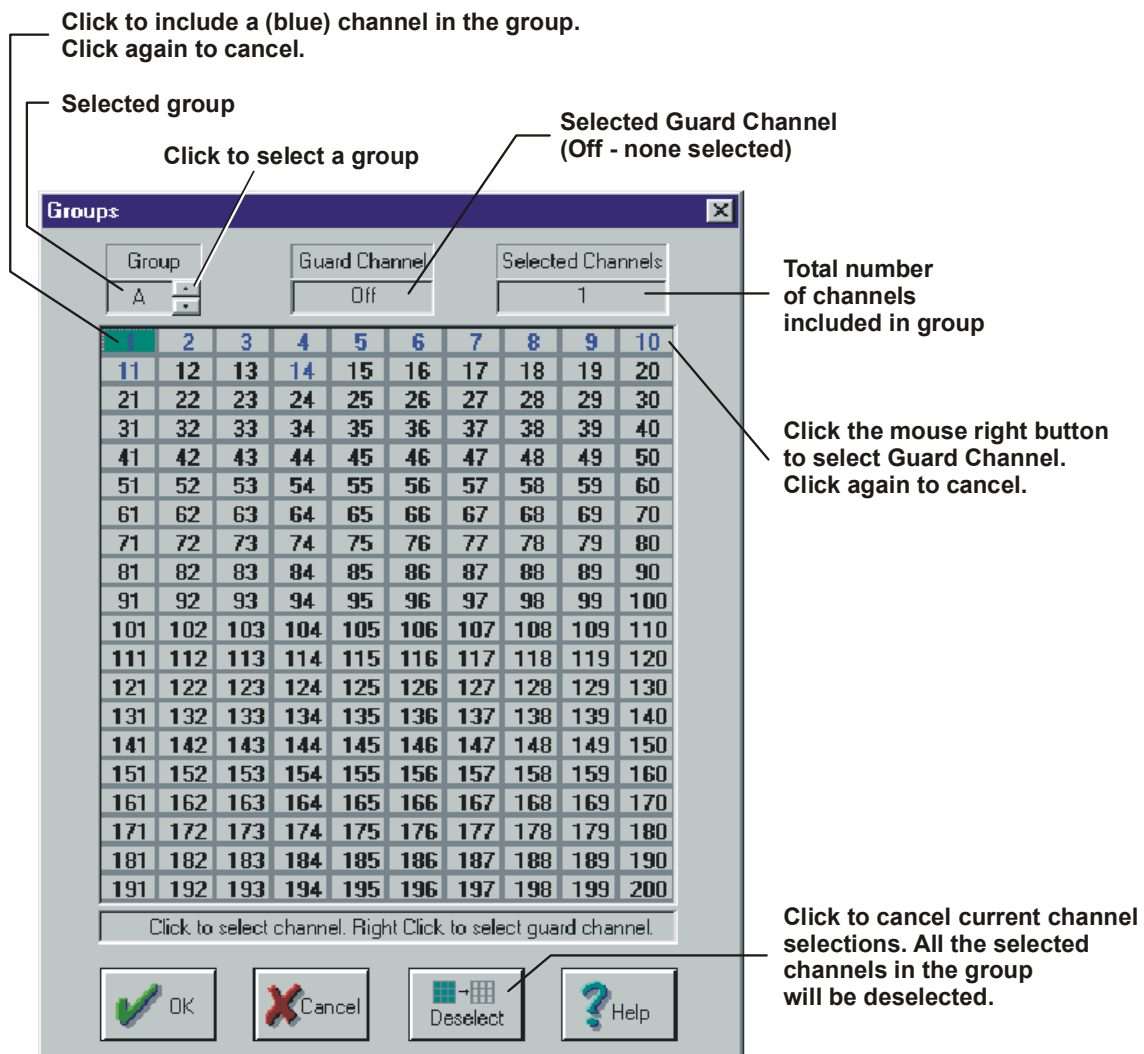

Blue - Channel is programmed

The Guard Channel is the channel scanned by the radio at 50% duty cycle with other scanned channels in the group.

The Scanned Channels are the channels the radio scans in a current group. If there are no programmed channels, or no channels are selected in a group, the Scanned Channels buttons are rectangular and gray. The following list defines the shape and color of the buttons following channels and group configuration. Since this manual is printed in black and white, please refer to your computer screen while reading the following information.

Button Color

Configuration

Gray with blue number	This channel is programmed, but not selected in the current group.
Green with blue number	This channel is programmed and it is also included in the current group.
Yellow with blue number	This channel is programmed and selected as guard channel in the current group.

NOTE

If you select a guard channel, and then change your selection without canceling, the first selected guard channel remains included in the group.

4-1.11 Built-in-Test Equipment

The *BITE* command enables the user to perform radio built in tests. To start the tests, perform one of the following steps:

- From the Service menu, choose *BITE* (ALT, S, B).
- On the toolbar, click the *BITE* button.

Click to select a test option.


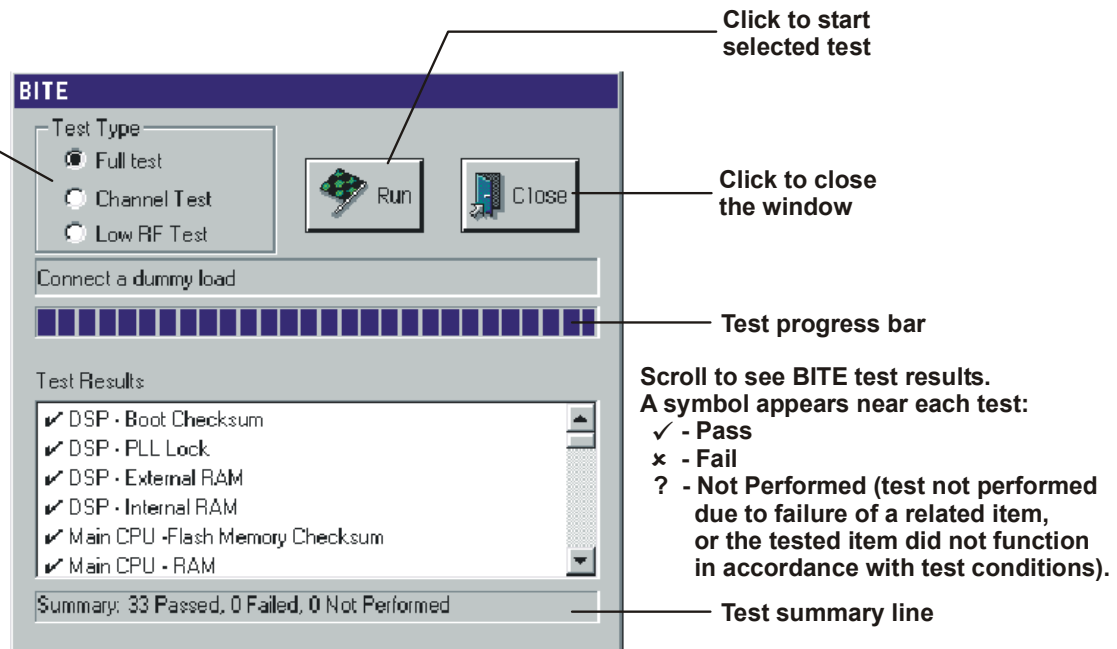



Figure -5. BITE Dialog Box

If there is no response from the radio, or the communication parameters (baud rate or communication ports) are not compatible, a Communication Failure message appears.

4-2. RSS ALE PANEL

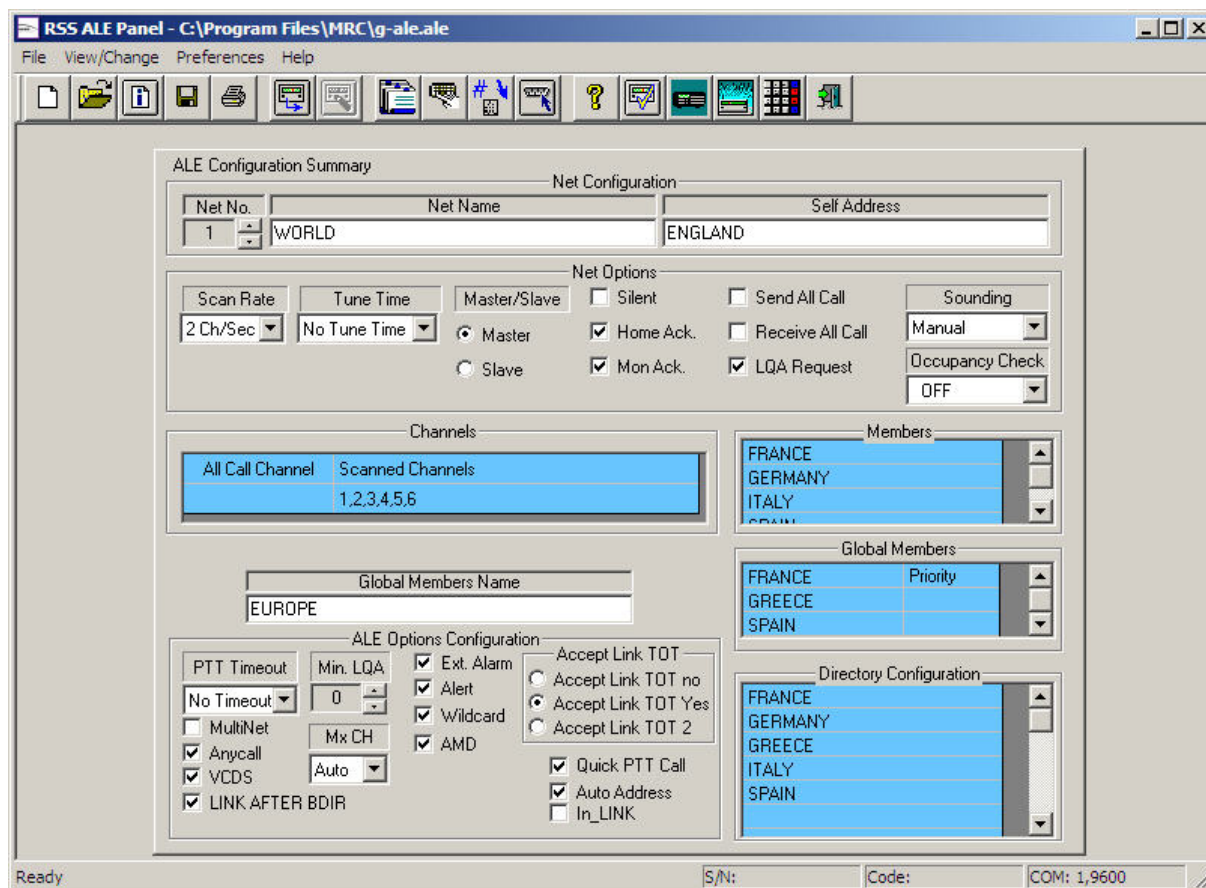

4-2.1 RSS ALE Panel Menus

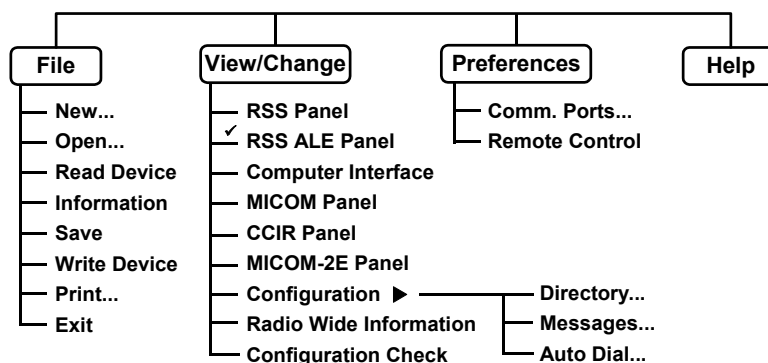

4-2.1.1 File Menu

Item	Function
New	Create a new ALE parameter data base, according to the present mode
Open	Open an existing ALE parameter file. The MICOM Radio Control application displays the Open dialog box, where you can locate and open the file you want.
Read Device	Load parameters from the radio
Information	Display information on the radio parameter file.
Save	Save the active ALE parameter data base with its current name. If you have not named the data base, the MICOM Radio Control application displays the Save As dialog box for you to do so.

Item	Function
Write Device	Program the parameters. When there are configuration errors, the Write Device button is grayed and the Configuration Check button is highlighted, and vice versa when the configuration is free of errors.
Print	Print the current loaded radio parameters.
Exit	End the MICOM Radio Control application

4-2.1.2 View/Change Menu

Item	Function
RSS Panel	Open the RSS Panel
RSS ALE Panel	Open the RSS ALE Panel
Computer Interface	Open the Computer Interface Panel
MICOM Panel	Open the MICOM Panel
CCIR Panel	Open the CCIR Panel (active only when connected to MICOM-3 with CCIR option)
MICOM-2E Panel	Open the MICOM-2E Panel (not active when connected to MICOM-3)
Configuration	Display the Configuration submenu used to configure ALE directories and net members, define AMD messages and configure the autodial function
Radio Wide Information	Displays a summary of the radio hardware and software configuration
Configuration Check	Display the list of configuration errors. When there are no configuration errors, this item is grayed

4-2.1.3 Preferences Menu

Item	Function
Comm. Ports...	Configure the computer serial port communication parameters
Remote Control	Enable/disable radio panel keypad

4-2.1.4 RSS ALE Panel Toolbar Buttons



Button	Name	Function
	New	Create a new ALE parameter data base.
	Open	Open an existing ALE parameter file. The MICOM Radio Control application displays the Open dialog box, where you can locate and open the *.ale file you want.

Button	Name	Function
	Information	Display information on the ALE parameter file.
	Save	Save the active ALE parameter data base with its current name. If you have not named the data base, the MICOM Radio Control application displays the Save As dialog box for you to do so.
	Print	Print the current loaded ALE parameters.
	Read Device	Load ALE parameters from the radio
	Write Device	Program the radio parameters. When there are configuration errors, the Write Device button is grayed and the Configuration Check button is highlighted, and vice versa when the configuration is free of errors.
	ALE Directory Configuration	View and edit the ALE directory configuration. The PC Control and Programming Software displays the ALE Directory Configuration dialog box, where you can view the ALE self addresses and net names and edit the station addresses to which this ALE can call.
	Message Configuration	View and edit messages. The PC Control and Programming Software displays the Message Configuration dialog box, where you can create pre-programmed messages.
	Automatic Dial Configuration	View and edit autodial entries. The PC Control and Programming Software displays the Automatic Dial Configuration dialog box. where you can configure messages to be sent to other stations using automatic dialing.
	Communication Ports	Select the baud rate and the serial communication port. The MICOM Radio Control application displays the Communication dialog box, where you can make the selection
	Help	Display on-line help
	Configuration Check	Display the errors in the configuration. When there are no configuration errors, this button is grayed
	Computer Interface Panel	Open the Computer Interface Panel
	RSS Panel	Open the RSS Panel
	MICOM Panel	Open the MICOM Panel
	Exit	End the MICOM Radio Control application

4-2.2 ALE Configuration Summary Window

The ALE Configuration Summary window provides information about nets, net options, scanned channels and members, ALE options and directory.

The ALE Configuration Summary window contains three information areas: Net Configuration (including Net Options, Channels and Members), ALE Options Configuration, and Directory Configuration. A double-click in fields with blue background automatically opens the associated dialog box, where the appropriate parameters can be edited.

For example, when you double-click the Member field, the Net Members dialog box appears.

Note that you can also access these dialog boxes from the Main menu or using the buttons on the toolbar.

The ALE Configuration Summary window is updated after:

- Completing a command and pressing the OK button.
- Loading an ALE parameter file from the disk (FileOpen).
- Loading an ALE parameter file from the radio (FileRead Device).
- Loading automatically the default parameter file from the disk (FileNew).

The screenshot shows the 'ALE Configuration Summary' window with the following sections:

- Net Configuration:**
 - Net No.: 1
 - Net Name: WORLD
 - Self Address: ENGLAND
- Net Options:**
 - Scan Rate: 2 Ch/Sec
 - Tune Time: No Tune Time
 - Master/Slave: Master (selected)
 - ☐ Silent
 - ☐ Send All Call
 - ☒ Home Ack.
 - ☐ Receive All Call
 - ☒ Mon Ack.
 - ☒ LQA Request
 - Sounding: Manual
 - Occupancy Check: OFF
- Channels:**

All Call Channel	Scanned Channels
	1,2,3,4,5,6
- Members:**

FRANCE
GERMANY
ITALY
SPAIN
- Global Members:**

Global Members Name	Priority
FRANCE	
GREECE	
SPAIN	
- ALE Options Configuration:**
 - PTT Timeout: No Timeout
 - Min. LQA: 0
 - ☒ Ext. Alarm
 - ☒ Alert
 - ☒ Wildcard
 - ☒ AMD
 - Accept Link TOT:
 - ☐ Accept Link TOT no
 - ☒ Accept Link TOT Yes
 - ☐ Accept Link TOT 2
 - ☐ MultiNet
 - ☒ Anycall
 - ☒ VCDS
 - ☒ LINK AFTER BDIR
 - Mx CH: Auto
 - ☒ Quick PTT Call
 - ☒ Auto Address
 - ☐ In_LINK
- Directory Configuration:**

FRANCE
GERMANY
GREECE
ITALY
SPAIN

4-2.2.1 Net Configuration Field

Parameter	Description
Net Configuration	
Net No.	The net number you want to configure. Click the ↑/↓ keys to select a different net (1 to 20).
Net Name	The net identification, i.e., the name used by net members to initiate a net call. The net name contains a string of up to 15 characters. Valid characters are upper case letters A-to-Z and/or numerals 0-to-9.
Self Address	The ALE identification in the net, i.e., the name used by other stations to address this ALE in this net. The self address contains a string of up to 15 characters. Valid characters are upper case letters A-to-Z and/or numerals 0-to-9.
Net Options	
Scan Rate	The number of channels scanned each second (channels/second).
Tune Time	The maximum time the current ALE waits for the called station to tune (this is the tune-in time of the slowest tuner in the net). The tune time is added to the calculated response time.
Master/Slave	Defines the ALE as master or slave in the current network. Only a master station can initiate a Net Call.
Silent	Defines whether the ALE acts in a silent network. A silent network is a network in which the current ALE can initiate calls but is not allowed to respond to an ALE transmission. For a call in the silent mode, the Silent parameter must be checked both in the calling and the called station.
Home Ack	Home acknowledge defines whether the ALE transmits an end-of-call indication to the remote station. A home acknowledge may be transmitted in a Private call by any ALE in a link. In a Net call or All Call, a home acknowledge may be transmitted only if the current ALE initiated the call. Note: <i>This parameter has no effect when the net is configured as a silent net.</i>
Mon Ack	Monitor acknowledge defines whether the ALE transmits an accept call indication to the station that initiated the call. A monitor acknowledge may be sent in a Private call. Note: <i>This parameter has no effect when the net is configured as a silent net.</i>
Send All Call	Defines whether the ALE is able to initiate an All Call. An "All Call" is an ALE broadcast transmission. All stations receiving an All Call are linked to the sender, even if they do not recognize the sender address. If an All Call channel is not defined, the call will be made on the scanned channel with the best LQA in the net.
Receive All Call	Defines whether the ALE accepts All Calls.
LQA Request	Defines whether the ALE will ask the called station for a report on the quality of the communication every time a call is initiated.
Sounding	Defines the sounding time interval cycle (in minutes or manual)
Occupancy Check	Defines whether the ALE will use the Speech Detect mechanism to determine whether the channel on which a call is about to be made is "occupied" (in addition to the ALE signal detection mechanism). In this case, a call cannot be initiated on an "occupied" channel.

Parameter	Description
Channels	
All Call Channel	The channel selected for All Call. Note that the Send All Call parameter in the Net Options dialog box page should be checked to initiate an All Call. If this parameter is left blank, then the All Call will be made on the scanned channel with the best LQA in the net.
Scanned Channels	The scanned channel list. When there are too many channels to be displayed, an ellipsis will appear at the end of the list. To view the entire channel list, open the Net Configuration\Scanned Channels 1-200 dialog boxes.
Members	The members of the current net, i.e., the stations participating in a Net Call. This list contains up to 16 addresses. Scroll to view addresses.

4-2.2.2 ALE Options Configuration Field

Parameter	Description
Global Call Configuration	
Global Members Name	The name of the global call in the currently selected ALE net
Global Members	The list of global call members of the current net, i.e., the stations participating in the selected global call. This list contains up to 20 addresses. Scroll to view addresses.
ALE Option Configuration	
PTT Timeout	The time that elapses from the moment you release the PTT button, until the link is disconnected (in minutes).
Multinet	Enables scanning all the defined ALE nets. This enables the radio to receive, and answer, calls from any of these nets, while working in a specific net.
AnyCall	Enables or disables the use of the AnyCall function.
VCDS	Enables or disables the VCDS option, which enables MICOM-3 transceivers with vocoders to automatically set up communication by temporarily adopting the appropriate key.
LINK AFTER BDIR	Bidirectional link: enable/disable the automatic setting up of a link on the best channel after a bidirectional handshake with an individual station.
Min. LQA	The minimum LQA score required to establish a link. If the minimum score is not achieved when the ALE attempts to establish a link, the ALE will try to establish a link on the scanned channel with the next best LQA. If the call is made on a specific channel and that channel does not achieve the minimum LQA score, the ALE will indicate "Link Fail".
Mx CH	Maximum scan channels: when MultiNet is enabled, the time needed for scanning all the nets may be rather long. This parameter is used to adapt the duration of the calling signal to the number of scanned net, to ensure that communications are not disrupted. You can select between automatic selection, or select a value in the range of 1 to 59 seconds (1 to 59, or Auto).
Ext. Alarm	Disables or enables the radio external alarm switch when a call is received.
Alert	Generates an alert tone when a call is received.
Wildcard	Enables or disables the use of wildcards in station names.
AMD	Enables or disables the use of the AMD function, which lets you send messages together with the call setup request.

Parameter	Description
Accept Link TOT	Disconnects the link if the PTT or any other button is not pressed within 30 seconds after a call is received. If Accept Link TOT is not checked, the received call is accepted immediately and automatically.
Quick PTT Call	Enables initiating a call to the last called address by pressing the PTT button twice while the ALE is not linked.
Auto Address	Automatically adds an unknown incoming and outgoing call address to the ALE directory each time a Private call is received or transmitted, provided the directory is not full.
In_LINK	Enables or disables the use of the in-link function, used to automatically notify the last station when all the other stations participating in a call have disconnected.

4-2.2.3 Directory Configuration Field

The Directory Configuration field in the **ALE Configuration Summary Window** lists the station addresses with which the current ALE can establish links.


4-2.3 ALE Configuration Submenu

The functions appearing under the *Configuration* menu are as follows:

- **Directory** To configure the ALE address list (the names of stations the ALE can address).
- **Messages** To configure messages to be sent with ALE calls.
- **Auto Dial** To configure shortcuts for ALE calls to frequently called stations (with or without message).

4-2.3.1 ALE Directory Configuration

1. Select the desired net name in the Net Names list.
2. Select your self-address in the Self Addresses list.
3. Add a new member by typing a valid address in the edit line and click **Add** to add it.
4. Delete a member by selecting it in the Directory List and then clicking **Delete**.

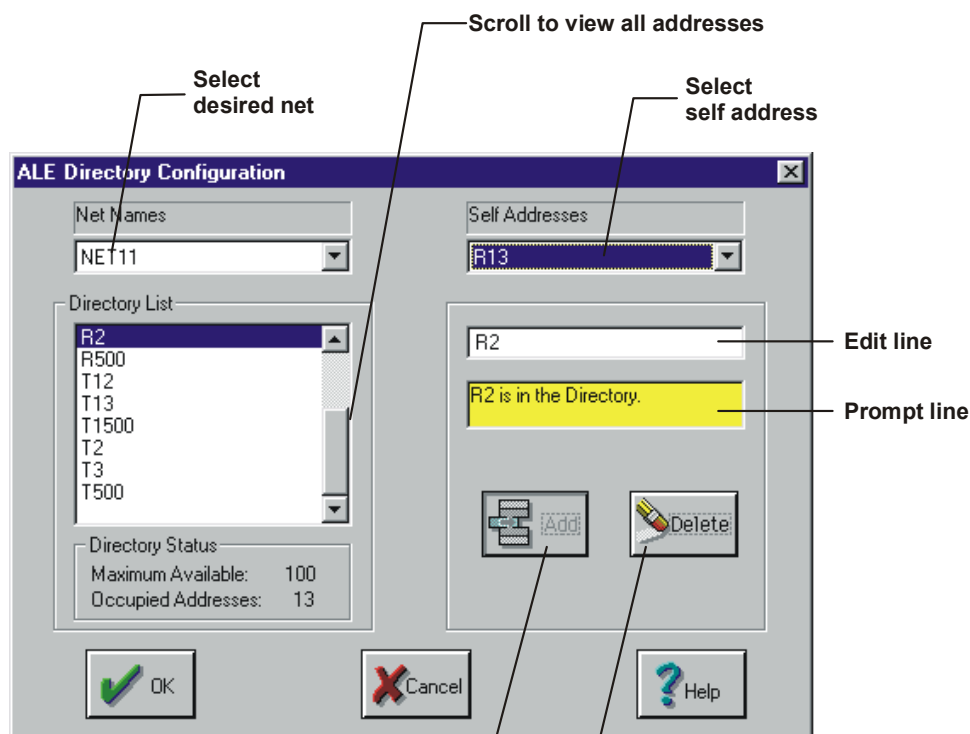

Type a valid address on the edit line and click to add it.

Type a valid address on the edit line, or select one from the Directory List and click to delete it.
To select more than one address, press CTRL and select from the directory list, then click the Delete button.

4-2.4 ALE Messages Configuration

1. Select the desired message in the Message No. list.
2. Type the desired message contents in the editing field, or edit the contents displayed after selecting a message number. Use only permissible characters from the table below.
3. The Messages Status field is automatically updated when messages are added/deleted.

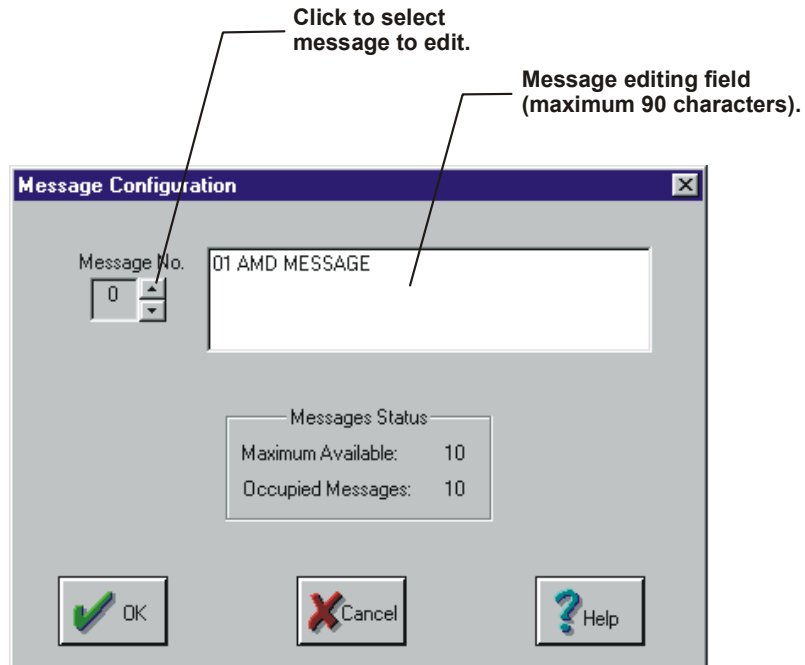


Table -1. Permissible Characters for ALE Messages


SP	0	@	P
!	1	A	Q
"	2	B	R
#	3	C	S
\$	4	D	T
%	5	E	U
&	6	F	V
'	7	G	A
(	8	H	X
)	9	I	Y
*	:	J	Z
+	;	K	[
?	<	L	\
-	=	M	]
.	>	N	^
/	?	O	_

4-2.5 Automatic Dial Configuration

The Automatic Dial command enables you to call any station in the "Call to address..." list, with or without the message included in the corresponding "With message..." field.

To create and edit the Automatic Dial Configuration, do one of the following:

- From the View/Change menu choose *Configuration|Auto Dial* (ALT V, C, A).
- Click the *Automatic Dial Configuration* button on the toolbar.

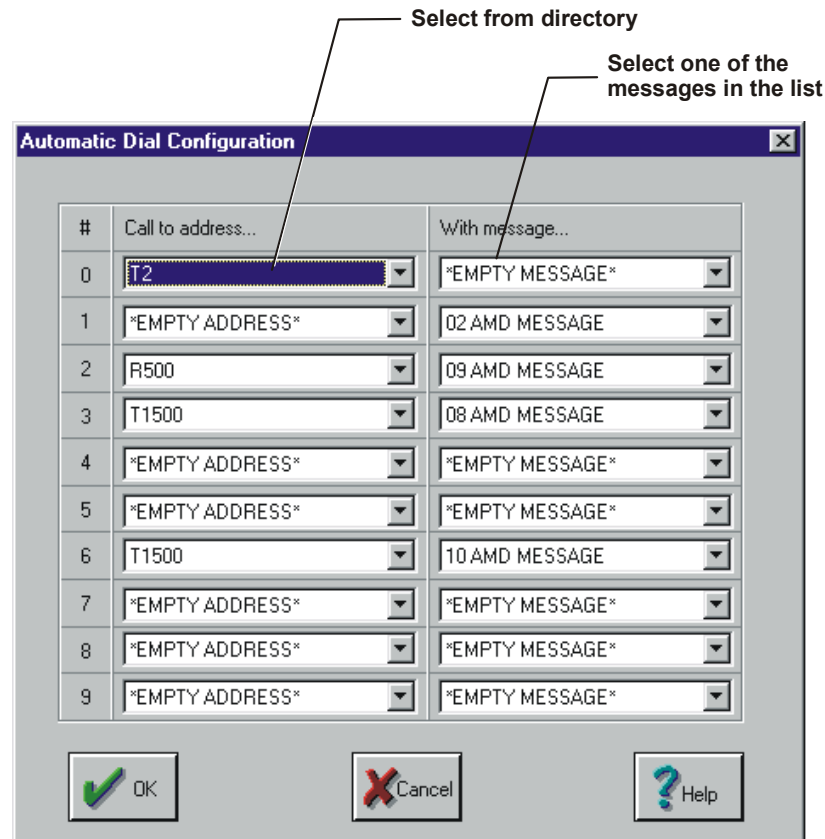

Parameter	Description
#	Pressing the # key on the radio panel, then selecting a digit from 0-9 and pressing Enter will cause the radio to execute a call to the station in the corresponding "Call to address..." field, with the message specified in the corresponding "With message..." field. For instance, in the example on page 4-23, if you press the # key on the radio panel and then select the digit 3 and press Enter. the radio will execute a call to the station named T1500, and will automatically send it the message "08 AMD message" to this station.
Call to address...	Each or the ten fields (0-9) in the "Call to address..." list enables you to select an address from the addresses appearing in the ALE Directory Configuration dialog box. Note: <i>Addresses cannot be edited and new addresses cannot be added.</i> When *EMPTY ADDRESS* is selected, autodial will not be executed when the relevant # key is pressed on the radio panel.

Parameter	Description
With message...	Each of the ten fields (0-9) in the "With message..." list enables you to select one of the messages appearing in the Messages Configuration dialog box and to automatically send it to the address in the corresponding "Call to address..." field. Notes: 1. Messages cannot be edited and new messages cannot be added. 2. When *EMPTY MESSAGE* is selected, no message will be sent when the call to the station defined in the relevant line is executed with Auto Dial. 3. If the message is longer than the available space in the list, not all of the message will be displayed. In order to view the entire message, enter the Messages Configuration dialog box.

4-2.6 Radio Wide Information Window

The *Radio Wide Information* window provides a summary of the radio hardware and software configuration, for view only.

It contains four information fields: Radio Model, Radio Options List, ECN List and SP List.

Radio Model		Radio Options List			
Serial No.	501SJB0782	Option	S/W Ver.	H/W Ver.	Status
Radio Code	2654731439	High Stability Oscillator	02.0010	01.0000	Disabled
Software Ver.	03.5700	Delete LSB	02.0010	01.0000	Disabled
Hardware Ver.	03.0000	Noise Blanker	02.0010	01.0000	Enabled
C.H. S/W Ver.	02.002	Remote Control	02.1400	01.0000	Disabled
C.H. H/W Ver.	04.002	SelCall			Disabled
		Delete ALE	03.0000	01.0000	Disabled
		Delete Data			Disabled
		Accessory Stop Scan	03.1950	01.0000	Disabled

Figure -6. Radio Wide Information Window

The following table lists the parameters of the Radio Model field in the **Radio Wide Information Window**:


Parameter	Description
Serial No.	The radio serial number. Also appears on the Status line
Radio Code	The radio specific factory identification code. Also appears on the Status line
Software Ver.	The radio software version
Hardware Ver.	The radio hardware version
C.H. SW Ver.	The radio control head software version
C.H. HW Ver.	The radio control head hardware version

The Radio Options List **in the Radio Wide Information Window** contains information on the add-on options installed in the radio. Only the **Enabled** options are active and can be configured.

The E.C.N. List field **in the Radio Wide Information Window**, includes a list of engineering changes performed on the radio.

The S.P. List field **in the Radio Wide Information Window**, includes a list of special products installed in the radio.

4-2.7 ALE Configuration Check Window

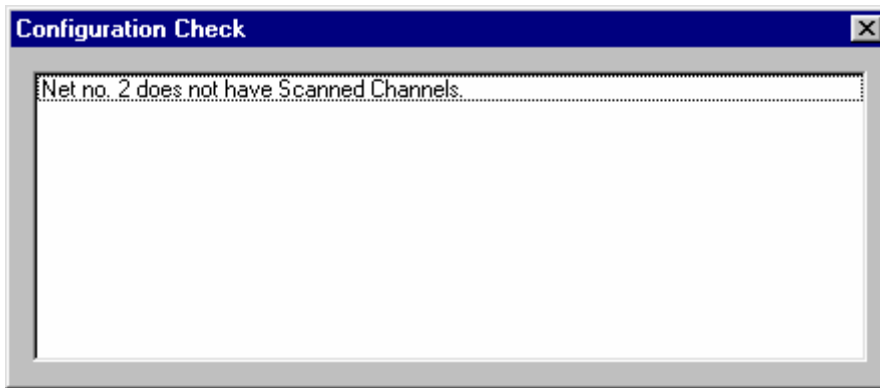

The *ALE Configuration Check* window displays a read-only updated list of errors in the ALE configuration parameters. Each time a dialog box is closed, or the ALE parameters are updated by reading from the radio or from a file, a validation check is made, updating the error list.



IMPORTANT

You cannot program the radio (download parameters) unless the error list is clear.

There are several types of errors messages.

NOTE

In the following error messages, XX and YY represent decimal numbers, while ZZZ represent a string of characters; for example, net name, self address, directory address or message.

- **Net No. XX does not have a Self Address** – Each valid net must have a self address and at least one scanned channel. Type an address in the Net Configuration/Net Options dialog box.
- **Net No. XX does not have a Net Name** – Each members including net must have a net name. Type a net name in the Net Configuration/Net Options box, or delete any defined members.
- **Net No. XX does not have Scanned Channels** – Each valid net must have a self address and at least one scanned channel. Select channels in the Net Configuration/Scanned Channels box.
- **Net No. XX Self Address ('ZZZ') defined in the Directory** – The same string cannot appear in the directory and self address simultaneously. This self address already exists in the ALE directory. Delete this address in the ALE Directory dialog box. or delete/change the self address in the Net Configuration/Net Options dialog box.
- **Net No. XX Net Name ('ZZZ') defined in the Directory** – The same string cannot appear in the directory and net name simultaneously. This net name already exists in the ALE directory. Delete this net address in the ALE Directory dialog box, or delete/change the net name in the Net Configuration/Net Options dialog box.
- **Net No. XX Self Address ('ZZZ') defined as Net No. YY Net Name** – The same string cannot be used as a self address and as a net name. This self address string is being used for a net name. Type a different net name or self address in the Net Configuration/Net Options dialog box.

- **Channel No. XX in Net No. YY selected but not programmed** – The channel selected in a net is not programmed. You can either deselect this channel in the Net Configuration/Scanned Channels 1-100 or Scanned Channels 101-200 dialog boxes, or program this channel using the MICOM-3 PC Control and Programming Software.
- **Directory Address ('ZZZ') is invalid** – An address can contain a string of up to 15 characters. Valid values are upper case A-to-Z and/or 0-to-9. Retype the address in the Directory Configuration dialog box.
- **Message No. XX ('ZZZ') contains invalid characters** – A message can contain a string of up to 90 characters. See Messages Configuration dialog box (page 4-22) for a list of valid characters. Retype the message.

When there are configuration errors, the *Write Device* command on the File menu and the *Write Device* button on the Toolbar are disabled (grayed). This command remains disabled until the errors are corrected and the list is clear.

In order to draw your attention to the fact that you cannot download ALE parameters while there are configuration errors, the *Configuration Errors* button on the Toolbar remains active as long as there are errors in the error list. Click this button and the Configuration Check window is displayed, listing the errors.

4-2.8 Configuring the Global Call Parameters

For each ALE net, you can configure a global call.

To start configuring the global call, first select the ALE net number, in the Net No. field, and then type the desired name in the Global Members Name field.

4-2.8.1 Configuring the Global Call Members

The Global Members field in the **ALE Configuration Summary Window** lists the global call group members.

The procedure used to configure the members of a global call is similar to the procedure used to configure the ALE directory, explained in para. 4-2.3.1: to start, double-click in the Global Members area, to display the Net Global Members configuration window.

Net Global Members

Net No.	Net Name	Self Address
1	1111	1001

Global Members Name: 1002


Global Members List: [Empty List Box]

Members Status:

Maximum Available:	20
Occupied Addresses:	0

Buttons: Add, Delete, Set Priority, OK, Cancel, Help

After adding members, select the priority member by clicking the Set Priority button while the desired member name is selected in the Global Members List.

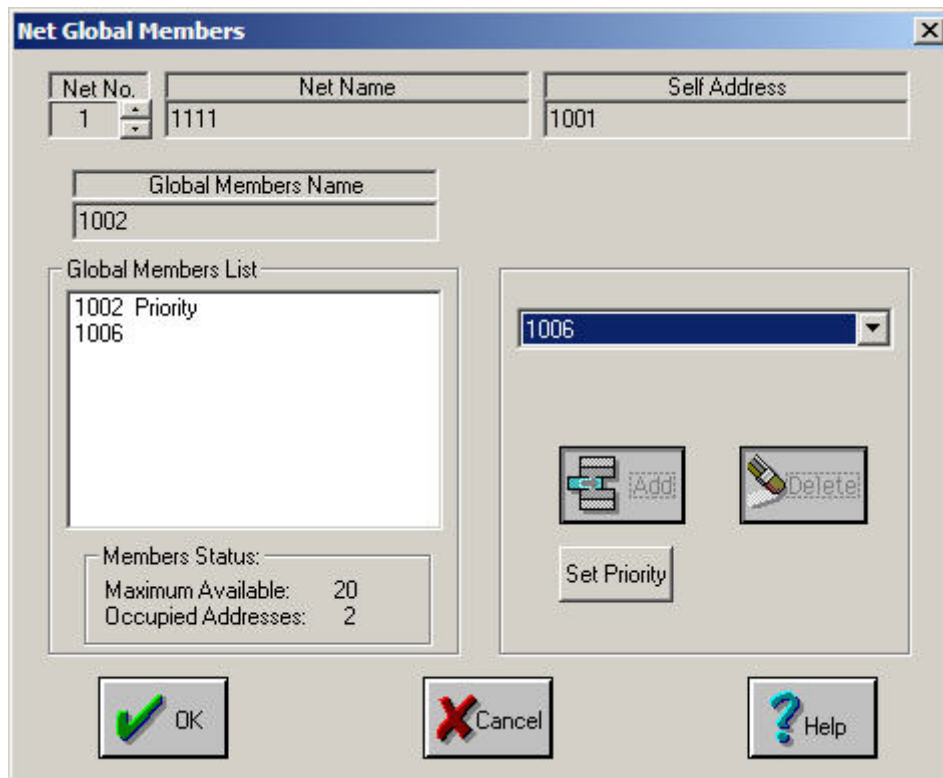

The image shows a Windows-style dialog box titled "Net Global Members". It contains several input fields and a list. At the top, there are three fields: "Net No." with the value "1", "Net Name" with the value "1111", and "Self Address" with the value "1001". Below these is a "Global Members Name" field containing "1002". A "Global Members List" box contains two entries: "1002 Priority" and "1006". To the right of the list is a dropdown menu currently showing "1006". Below the list, there is a "Members Status" section showing "Maximum Available: 20" and "Occupied Addresses: 2". To the right of the list are three buttons: "Add" (with a plus icon), "Delete" (with a minus icon), and "Set Priority". At the bottom of the dialog are three buttons: "OK" (with a green checkmark icon), "Cancel" (with a red X icon), and "Help" (with a blue question mark icon).

Net No.	Net Name	Self Address
1	1111	1001

Global Members Name
1002


Global Members List

- 1002 Priority
- 1006


Members Status:
Maximum Available: 20
Occupied Addresses: 2

Buttons: Add, Delete, Set Priority, OK, Cancel, Help

4-3. COMPUTER INTERFACE PANEL

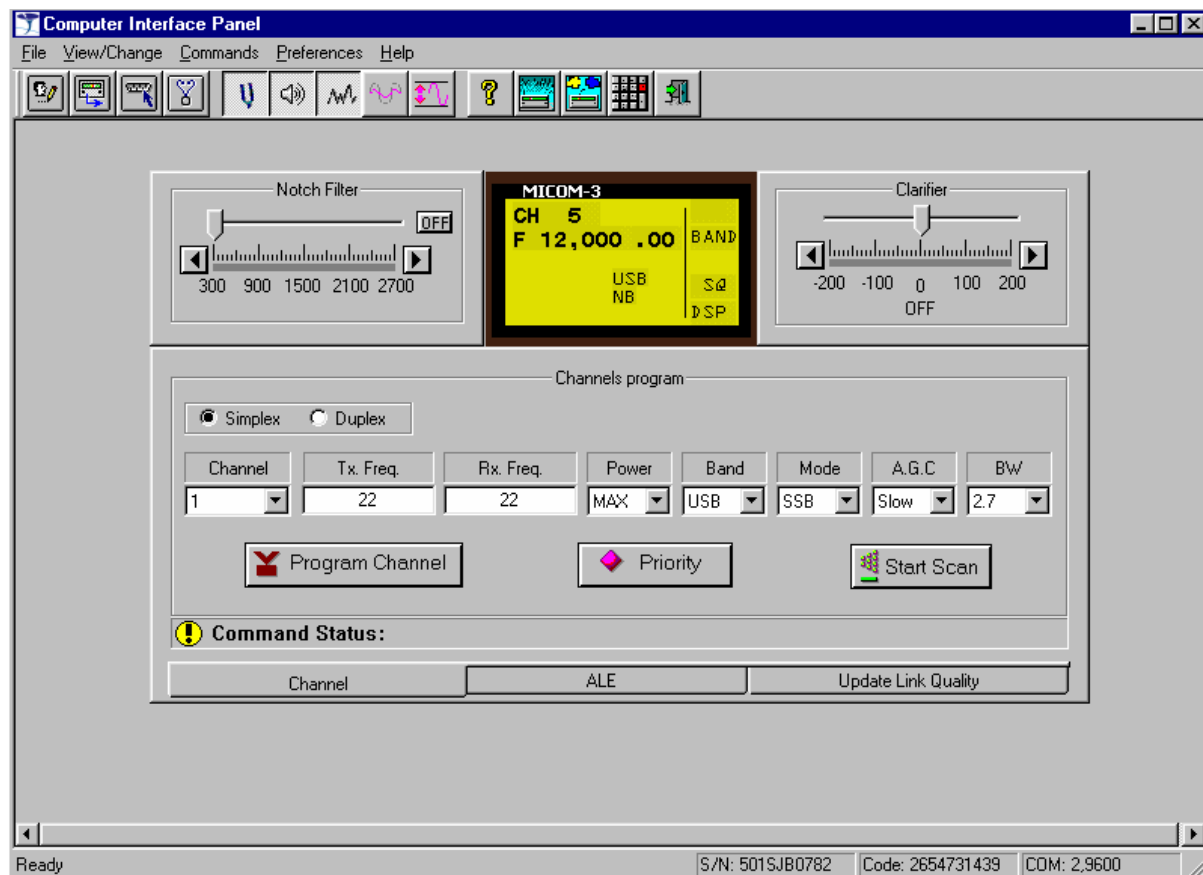

4-3.1 Computer Interface Panel Menus

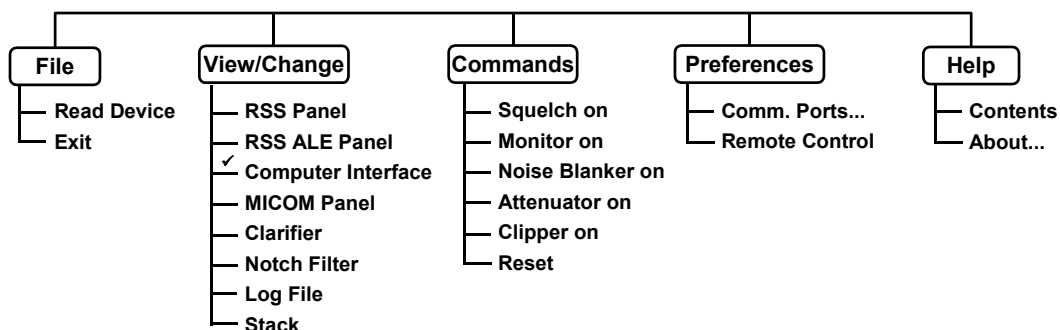

4-3.1.1 File Menu

Item	Function
Read Device	Load parameters from the radio
Exit	End the MICOM Radio Control application

4-3.1.2 View/Change Menu

Item	Function
RSS Panel	Open the RSS Panel
RSS ALE Panel	Open the RSS ALE Panel
Computer Interface	Open the Computer Interface Panel
MICOM Panel	Open the MICOM Panel

Item	Function
Clarifier	Enable/disable the display of the clarifier control
Notch Filter	Enable/disable the display of the notch filter
Log File	Enable/disable the display of the log file
Stack	Enable/disable the display of the stack contents

4-3.1.3 Commands Menu

Item	Function
Squelch on	Turns the squelch circuit on or off. When squelch is on, the speaker remains muted until the radio detects a valid signal in its input. When squelch is off, the speaker emits all signals, including noise.
Monitor on	Mutes/enables the speaker during the ALE link setup process.
Noise Blanker on	Activates/deactivates the noise blanker.
Attenuator on	Activates/deactivates the attenuator at the receiver input. When on, attenuates the incoming signal by 20dB.
Clipper on	When on, uses voice processing to boost the output power.
Reset	Restarts the radio.

4-3.1.4 Preferences Menu

Item	Function
Comm. Ports...	Configure the computer serial port communication parameters
Remote Control	Enable/disable radio panel keypad

4-3.1.5 Computer Interface Panel Toolbar Buttons




NOTE

When the MRC is connected to a MICOM-3 with the CCIR option, the toolbar also includes a **View CCIR Panel** button.


Button	Name	Function
	View/Hide Log File	Enable/disable the display of the log file.
	Read Device	Loads parameters from the radio.
	Communication Ports	Selects the baud rate and the computer communication port.
	BITE	Perform radio built in tests.
	Squelch ON/OFF	Turns the squelch circuit on or off. When squelch is on, the speaker remains muted until the radio detects a valid signal in its input. When squelch is off, the speaker emits all signals, including noise.
	Monitor Mute ON/OFF	Mutes/enables the speaker during the ALE link setup process.
	Noise Blanker ON/OFF	Activates/deactivates the noise blanker.
	Attenuator ON/OFF	Activates/deactivates the attenuator at the receiver input. When on, attenuates the incoming signal by 20dB.
	Clipper ON/OFF	When on, uses voice processing to boost the output power.
	Help	Displays on-line help.
	RSS Panel	Open the RSS Panel
	RSS ALE Panel	Open the RSS ALE Panel
	MICOM Panel	Open the MICOM Panel
	Exit	End the MICOM Radio Control application

4-3.2 Channels Tab


Displays the notch filter and clarifier controls together with a mimic of the MICOM radio display. The lower section includes control windows for operation in the CHAN mode, ALE mode and for ALE link quality update.

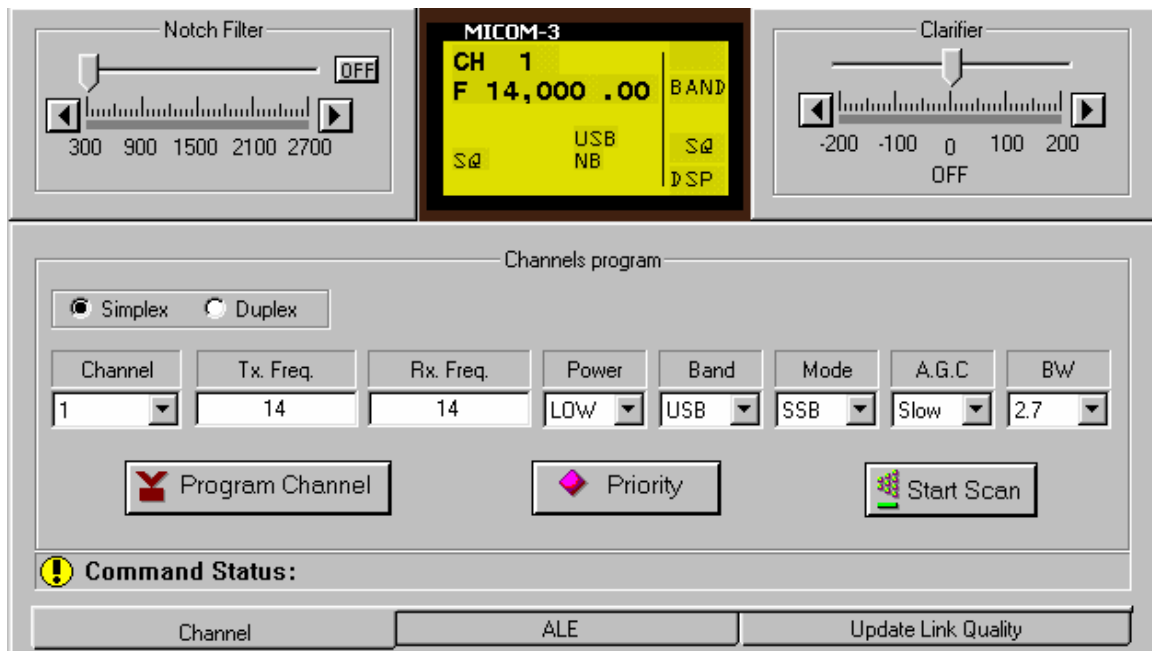

4-3.2.1 Clarifier

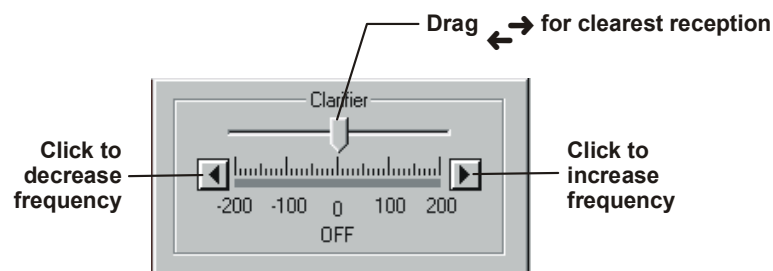

4-3.2.2 Notch Filter

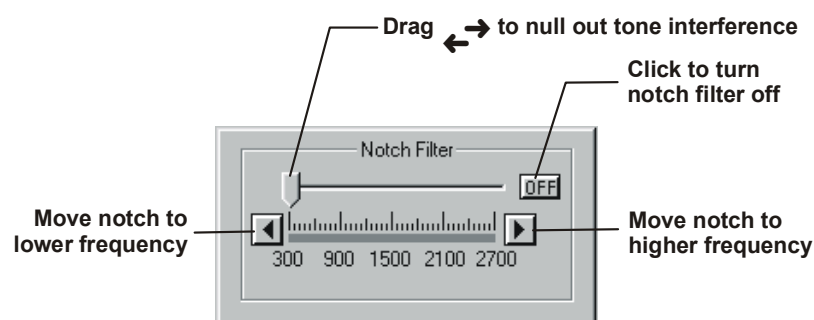

4-3.2.3 Channel Mode Controls

The screenshot shows the 'Channels program' window. At the top, there are radio buttons for 'Simplex' (selected) and 'Duplex'. Below this is a row of controls: 'Channel' (dropdown menu showing '1'), 'Tx. Freq.' (text field showing '14'), 'Rx. Freq.' (text field showing '14'), 'Power' (dropdown menu showing 'LOW'), 'Band' (dropdown menu showing 'LSB'), 'Mode' (dropdown menu showing 'SSB'), 'A.G.C.' (dropdown menu showing 'Off'), and 'B/W' (dropdown menu showing '2.7'). Below these are three buttons: 'Program Channel' (with a red 'Y' icon), 'Priority' (with a pink diamond icon), and 'Start Scan' (with a green radar icon). At the bottom, there is a 'Command Status' section with a yellow warning icon and a status bar with 'Channel', 'ALE', and 'Update Link Quality' buttons.

4-3.2.3.1 Buttons

Program Channel Click this button to download the selected channel number and its parameters to the radio.

Priority Instantaneously changes the current channel to a pre-defined priority channel, overriding the current status and the standard operating procedure.

Start Scan/Stop Scan The Start Scan button initiates scanning of channels in the currently selected group. This is considered the Radio Scanning state.

The Stop Scan button stops radio scanning. The radio status switches to Channel mode.

4-3.2.3.2 Parameters

Parameter	Function
Simplex	The Receive (Rx) and Transmit (Tx) frequencies are identical. When you type a value in either the Rx or the Tx Frequency fields, the other field will automatically be set to the same frequency.
Duplex	Indicates that the Receive (Rx) frequency is different from the Transmit (Tx) frequency. When you type a value in either the Rx or the Tx Frequency field, this does not affect the other frequency field.
Channel	Lists all programmed channels in the radio and displays the selected channel.
Tx Frequency	The transmit frequency (MHz). Frequency range: 1.6 MHz - 30 MHz.
Rx Frequency	The receive frequency (MHz). Frequency range: 0.1 MHz - 30 MHz.
Band	Sideband mode: Upper Sideband (USB) or Lower Sideband (LSB).
AGC	Automatic (receive) Gain Control: • Slow - used for voice communication • Fast - generally used for data transmission (only when required by the HF data modem). • OFF - no AGC.
Tx Power	Transmit Power Level: • Low - 25 Watt • Medium - 60 Watt • High - 100 Watt • Max. - 125 Watt

Parameter	Function														
Mode	Carrier reinsertion level: • SSB (Single Sideband) -The radio operates on the upper side band with suppressed carrier. • AME (Amplitude Modulation Equivalent) - The radio operates on the upper/lower sideband with the carrier inserted 6 dB below peak envelope power. • PLT (Pilot mode) - The radio operates on the upper/lower side band with the carrier inserted 15 dB below peak envelope power. • ISB (Independent Side Band) - Both sidebands are transmitted or received, with independent information in each one														
Bandwidth	The bandwidth of the current channel, as follows: <table> <tr> <th>Display</th><th>Range</th></tr> <tr> <td>2.1</td><td>350 to 2100 Hz</td></tr> <tr> <td>2.7</td><td>350 to 2700 Hz</td></tr> <tr> <td>3.0</td><td>350 to 3000 Hz</td></tr> <tr> <td>3.3</td><td>350 to 3300 Hz</td></tr> <tr> <td>LSM</td><td>1450 to 1950 Hz</td></tr> <tr> <td>C.W.</td><td>650 to 1150 Hz</td></tr> </table>	Display	Range	2.1	350 to 2100 Hz	2.7	350 to 2700 Hz	3.0	350 to 3000 Hz	3.3	350 to 3300 Hz	LSM	1450 to 1950 Hz	C.W.	650 to 1150 Hz
Display	Range														
2.1	350 to 2100 Hz														
2.7	350 to 2700 Hz														
3.0	350 to 3000 Hz														
3.3	350 to 3300 Hz														
LSM	1450 to 1950 Hz														
C.W.	650 to 1150 Hz														

4-3.3 ALE Controls

Used to...

- Select the net, channel, station and message.
- Perform ALE calling.
- Display unanswered calls.
- Reply unanswered calls.

The screenshot shows a software interface for ALE (Automatic Link Establishment) controls. It features a 'Call Type' section with three radio buttons: 'Station' (selected), 'Net', and 'All Call'. Below this are input fields for 'Net' (value 1), 'Channel' (value 1), and 'To' (value A). A 'Clr Msg:' button is located next to a message input field. At the bottom of the main control area are four buttons: 'Send', 'Stack', 'Replace', and 'Abort'. Below these buttons is a 'Command Status' section with a yellow warning icon. At the very bottom is a status bar with three sections: 'Channel', 'ALE', and 'Update Link Quality'.

4-3.3.1.1 Buttons

- Send** Click this button to initiate ALE Calling.
- Stack** Displays all unanswered calls in ALE mode.
- Replace** Disconnects/aborts the ALE link and initiates ALE calling on a better channel.
- Abort** Disconnects/aborts ALE calling.

4-3.3.1.2 Parameters

Parameter	Function
Call Type	Selects the call type: Station, Net or All Call.
Net	Displays the current net number and name.
Channel	Lists all available channels in the current net and displays the Rx frequency of the selected channel.
To	Lists all station and net names stored in the ALE directory.
Clear Msg	Clears the message field.
Message List	Lists all defined messages (up to 100). Messages can be edited.

4-3.4 Update Link Quality Controls

In the Update Link Quality tab, you can:

- Activate sounding.
- Perform bidirectional transmission.

The screenshot shows a software interface for updating link quality. It includes a 'Type:' section with two radio buttons: 'BiDirectional' (which is selected) and 'Sounding'. Below this are three input fields: 'Net:', 'Channel:', and 'To:'. There is also a 'Clr Msg:' button and a text area. At the bottom of the main panel are two buttons: 'Send' (with a speaker icon) and 'Abort' (with a red X icon). Below the main panel is a 'Command Status:' section with a yellow warning icon. At the very bottom is a status bar with three tabs: 'Channel', 'ALE', and 'Update Link Quality'.

4-3.4.1.1 Buttons

Send Click this button to initiate sounding/bidirectional transmission.

Abort Abort sounding/bidirectional transmission.

4-3.4.1.2 Parameters

Parameter	Function
Type	Selects the ULQ transmission type: • Sounding • Bidirectional transmission
Net	Displays the current net number and name.
Channel	Lists all available channels in the current net and displays the Rx frequency of the selected channel.
To	Lists all station and net names stored in the ALE directory.
Clear Msg	Clears the message field.
Message List	Lists all defined messages (up to 100). Messages can be edited.

4-3.5 Using the Stack


Unanswered calls in ALE mode are stored in the Stack, which can save up to 200 calls (depending on the log file size). When at least one unanswered call is registered, the Stack button in the ALE tab is activated. If the stack is empty, i.e., there are no unanswered calls, the Stack button is disabled.

NOTE

The contents of the Stack are not necessarily identical to those of the radio cache. The Stack is only updated when the application is running and can store up to 200 unanswered calls.

4-3.5.1 Viewing the Stack List

To display the Stack log file, from the View/Change menu, select Stack. Alternatively, click the Stack button in the ALE tab.

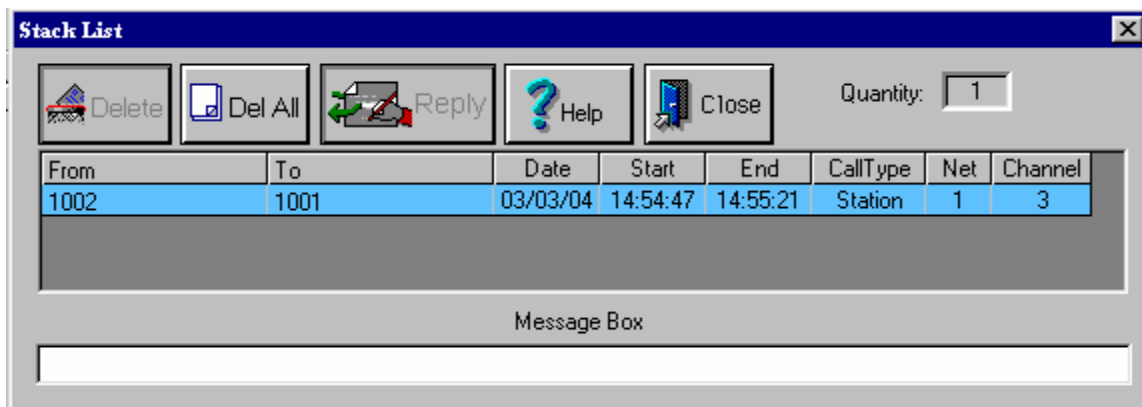

Field	Indication
From	The caller's station name
To	The called station name
Date	The date on which the call was made
Start	The starting time of the call
End	The ending time of the call
Message	The received/transmitted message.
Net number	The net number
Channel	The channel number
Call type	The call type: Station, Net, or All Call

4-3.5.2 The Stack List Toolbar

The stack list toolbar enables quick access to commonly used commands and dialog boxes. To display or hide the toolbar, select Toolbar from the View/Change menu.

The stack list command buttons are:


- Delete** Click this button to delete specific calls that you have marked. To select multiple records, hold down the CTRL button and click the rows in the row selector.
- Delete All** Click this button to delete all unanswered calls.
- Reply** Click this button to reply to an unanswered call that you have marked (one call only).
- Help** Click this button to display on-line help.
- Close** Click this button to close the Stack List window.

4-3.5.3 Replying to Unanswered Calls

To reply to an unanswered call registered in the Stack list:


1. Click the listing to which you wish to reply.
2. Click the Reply button in the Stack list toolbar.
3. The application automatically performs the following sequence:
 - The marked listing is deleted from the Stack list.
 - The Stack list is closed.
 - The Station name and all relevant information net and relevant information (net and channel) are automatically loaded into the ALE tab fields.
4. Click the Send button to initiate the call.

4-3.6 Log File

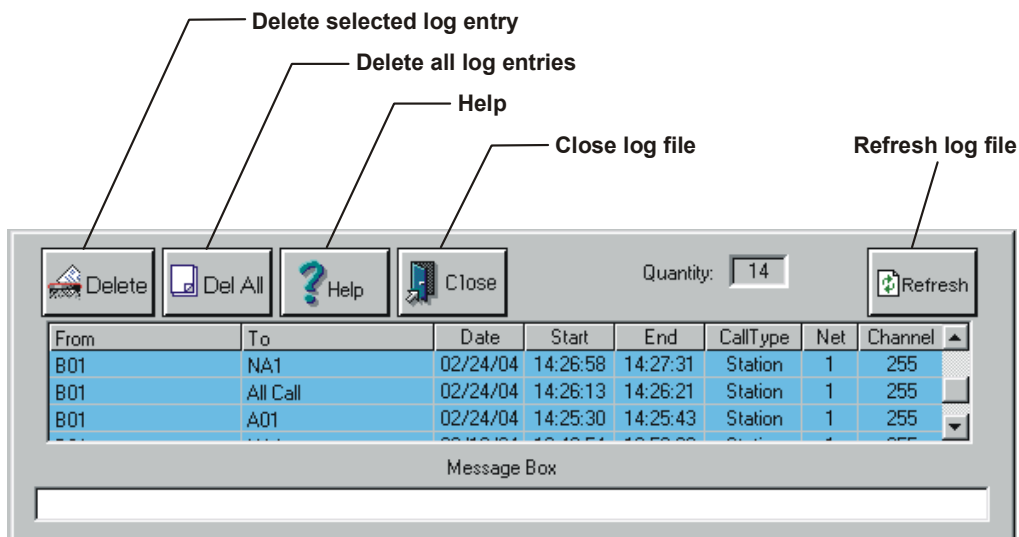

4-3.7 Incoming Call Notification

Whenever ALE is enabled, you will see notification message whenever a call addressed to your radio is received. Any message received with call setup request is displayed in the Message field.


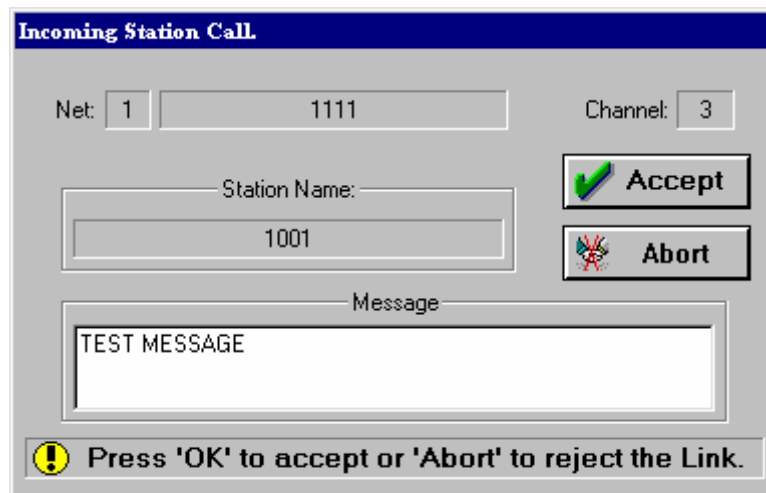


The dialog box titled "Incoming Station Call" has a blue header bar. It contains several input fields and buttons. At the top left, "Net:" is followed by a small box containing "1" and a larger box containing "1111". To the right, "Channel:" is followed by a box containing "3". Below these, "Station Name:" is followed by a box containing "1001". To the right of the Station Name box are two buttons: "Accept" with a green checkmark icon and "Abort" with a red X icon. Below the Station Name box is a "Message" label above a text area containing "TEST MESSAGE". At the bottom, a yellow warning icon is followed by the text "Press 'OK' to accept or 'Abort' to reject the Link."

Click **Accept** to accept the call and start communicating or click **Abort** to reject the call and disconnect the link.

4-4. MICOM PANEL

The displayed panel depends on the connected MICOM model, MICOM-3 (below) or MICOM-2E.

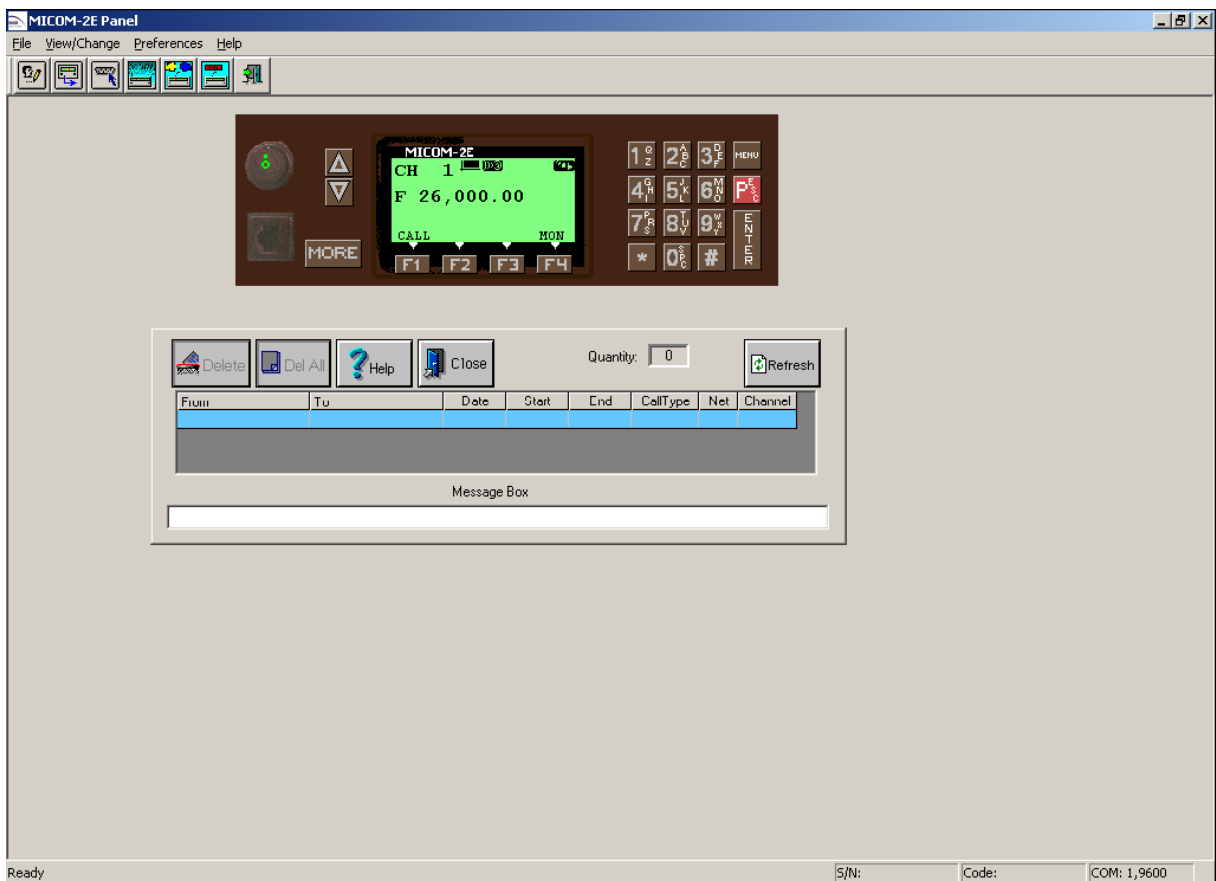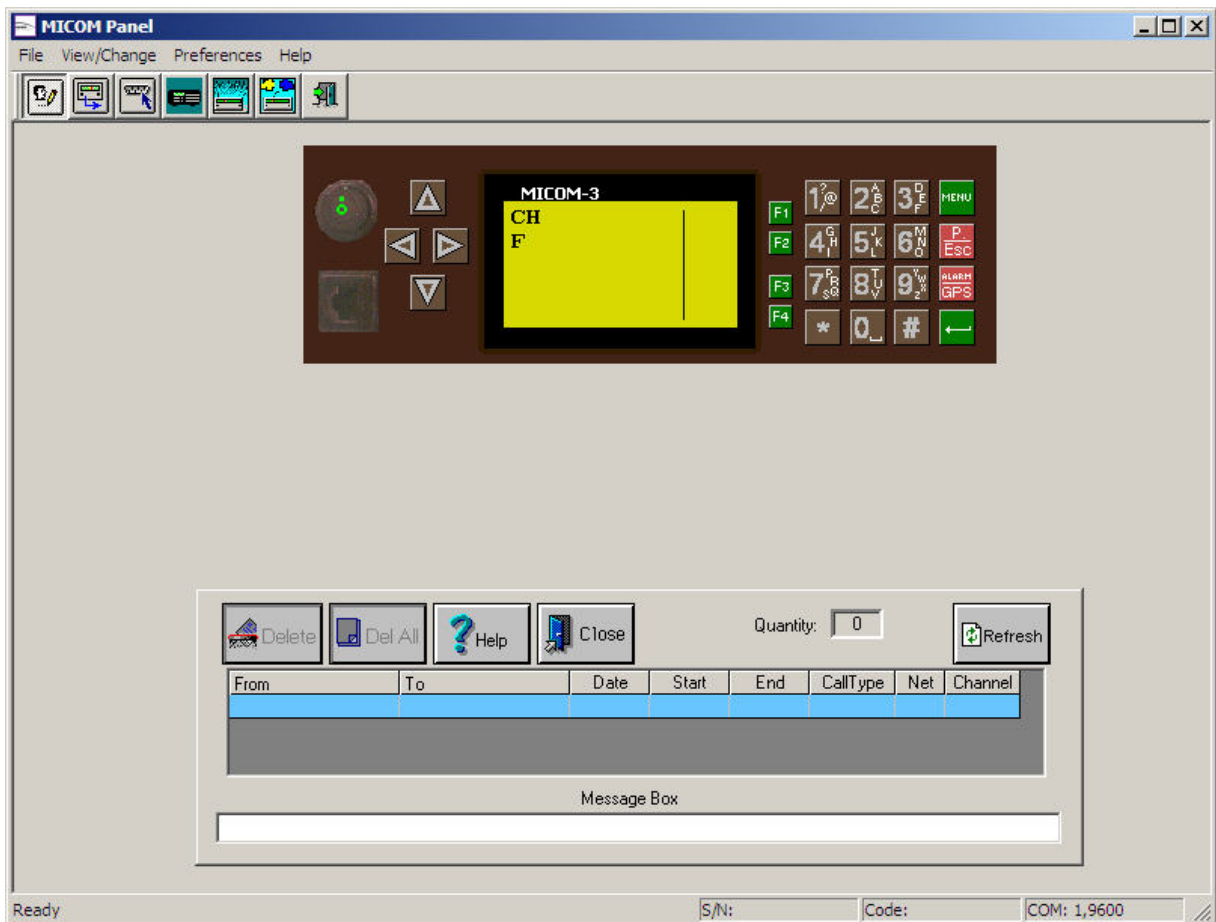

4-4.1 MICOM Panel Menus

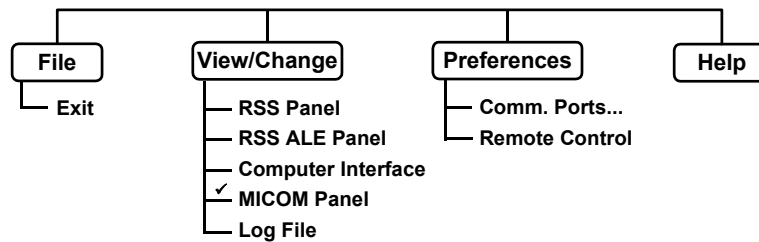


Figure -7. **MICOM Panel Menu Bar (MICOM-3)**

4-4.1.1 File Menu

Item	Function
Exit	End the MICOM Radio Control application

4-4.1.2 View/Change Menu

Item	Function
RSS Panel	Open the RSS Panel
RSS ALE Panel	Open the RSS ALE Panel
Computer Interface	Open the Computer Interface Panel
MICOM Panel	Open the MICOM Panel
Log File	Display/hide the Log File

4-4.1.3 Preferences Menu

Item	Function
Comm. Ports...	Configure the computer serial port communication parameters
Remote Control	Enable/disable radio panel keypad

4-4.1.4 Toolbar Buttons

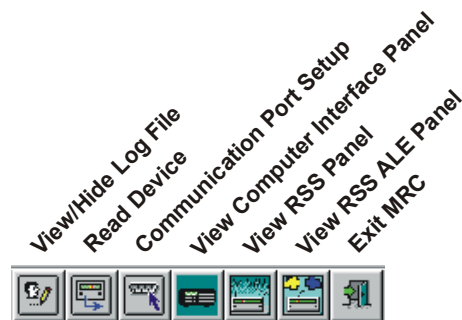


Figure -8. **MICOM Panel Toolbar**


Button	Name	Function
	Log File	Display/hide the Log File
	Read Device	Load parameters from the radio
	Communication Ports	Configure the computer serial port communication parameters

Button	Name	Function
	Computer Interface Panel	Open the Computer Interface Panel
	RSS Panel	Open the RSS Panel
	RSS ALE Panel	Open the RSS ALE Panel
	Exit	End the MICOM Radio Control application

4-4.1.5 Using the MICOM Panel

Use the mouse to click the keys on the panel, instead of pressing keys on the actual radio panel.


If you want to disable the radio panel keypad, select Remote Control on the Preferences menu.

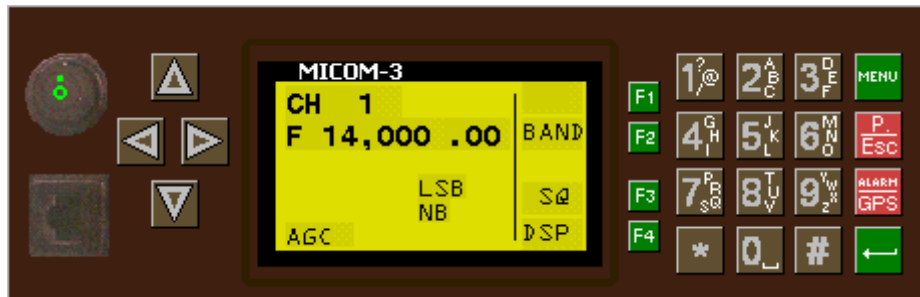

4-4.1.6 Log File


Shows records of calls received and transmitted by your radio.

- Click **Refresh** to update the display.
- Select a line: the **Message Box** displays any message transmitted with the selected call. Click **Delete** to delete the call record from the Log File.
- Click **Del All** to erase all the records from the Log File.

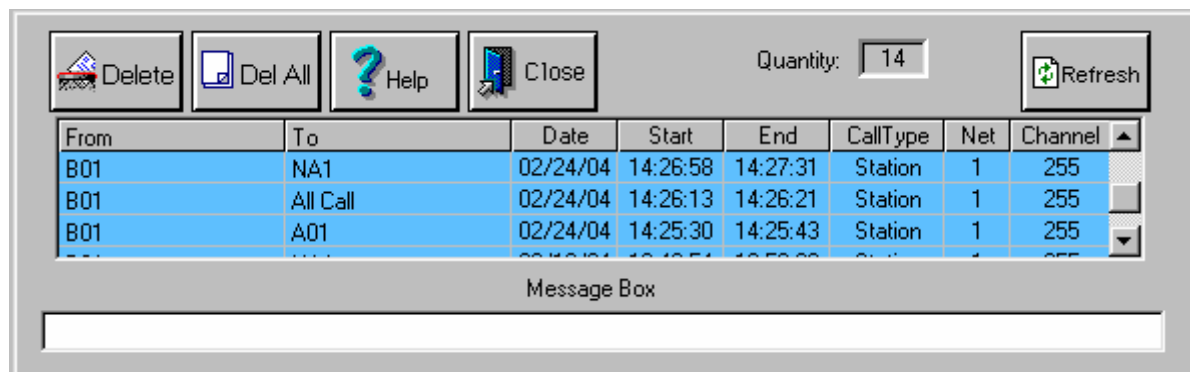


4-5. CCIR PANEL

The CCIR panel can be displayed only when connecting a MICOM-3 with the CCIR digital selective call option installed.

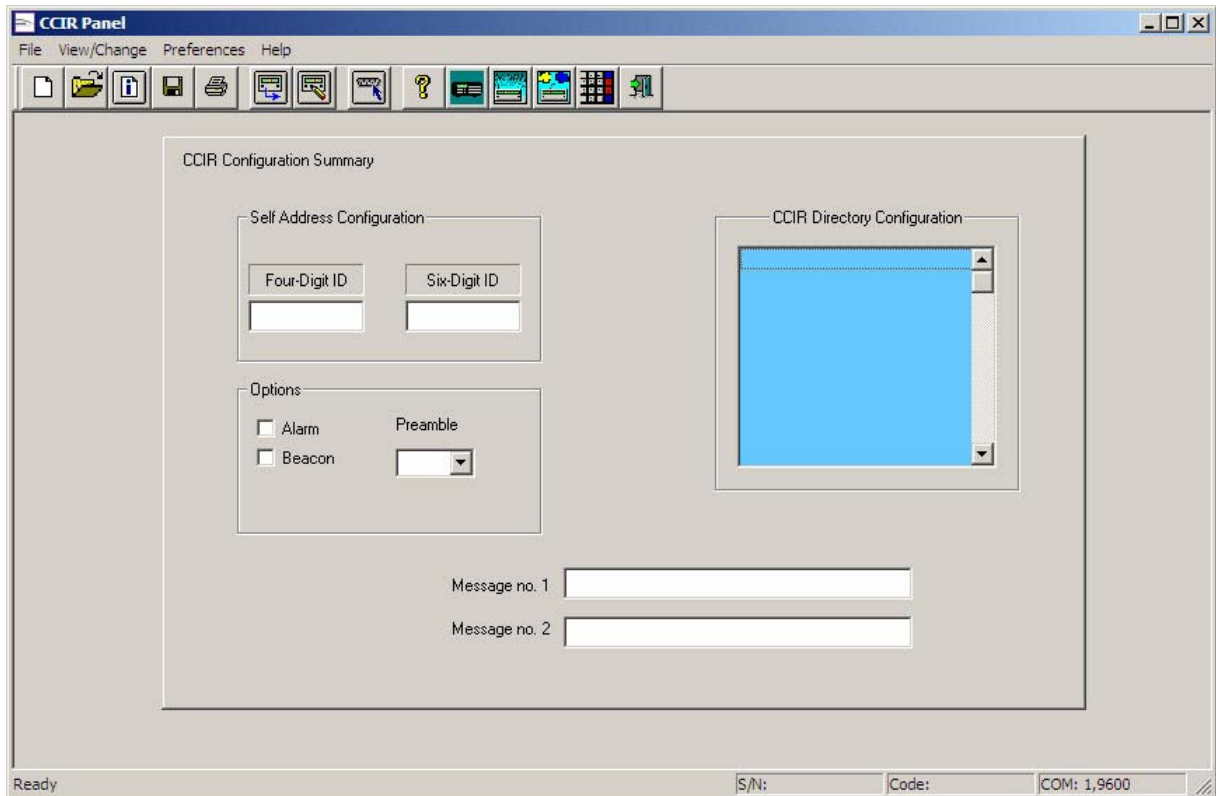

4-5.1 CCIR Panel Menus

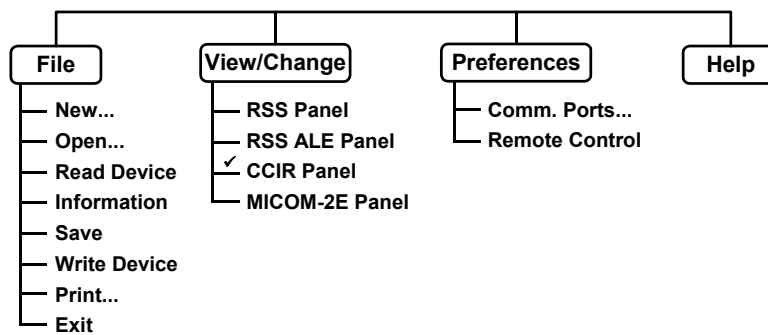

4-5.1.1 File Menu

Item	Function
New	Create a new radio parameter data base, according to the present mode
Open	Open an existing radio parameter file. The MICOM Radio Control application displays the Open dialog box, where you can locate and open the file you want.
Read Device	Load parameters from the radio
Information	Display information on the radio parameter file.
Save	Save the active radio parameter data base with its current name. If you have not named the data base, the MICOM Radio Control application displays the Save As dialog box for you to do so.
Write Device	Program the radio parameters. When there are configuration errors, the Write Device button is grayed and the Configuration Check button is highlighted, and vice versa when the configuration is free of errors.
Print	Print the current loaded radio parameters.
Exit	End the MICOM Radio Control application

4-5.1.2 View/Change Menu

Item	Function
RSS Panel	Open the RSS Panel
RSS ALE Panel	Open the RSS ALE Panel
CCIR Panel	Open the CCIR Panel
MICOM-2E Panel	Open the MICOM-2E Panel (not active when connected to MICOM-3)

4-5.1.3 Preferences Menu

Item	Function
Comm. Ports...	Configure the computer serial port communication parameters
Remote Control	Enable/disable radio panel keypad

4-5.1.4 CCIR Panel Toolbar Buttons



Button	Name	Function
	New	Create a new radio parameter data base, according to the present mode
	Open	Open an existing radio parameter file. The MICOM Radio Control application displays the Open dialog box, where you can locate and open the *.ccr file you want.
	Information	Display information on the radio parameter file.
	Save	Save the active radio parameter data base with its current name. If you have not named the data base, the MICOM Radio Control application displays the Save As dialog box for you to do so.
	Print	Print the current loaded radio parameters.
	Read Device	Load parameters from the radio
	Write Device	Program the radio parameters. When there are configuration errors, the Write Device button is grayed and the Configuration Check button is highlighted, and vice versa when the configuration is free of errors.
	Communication Ports	Select the baud rate and the serial communication port. The MICOM Radio Control application displays the Communication dialog box, where you can make the selection
	Help	Display on-line help
	Computer Interface Panel	Open the Computer Interface Panel
	RSS Panel	Open the RSS Panel (actually, this will open the PSS CCIR Panel, described in para. 4-6)
	RSS ALE Panel	Open the RSS ALE Panel
	MICOM Panel	Open the MICOM Panel
	Exit	End the MICOM Radio Control application

4-5.2 CCIR Configuration Summary Window

4-5.2.1 Self-Address Configuration

Used to configure the own selective call address used in the CCIR mode.

In accordance with the CCIR standards, two types of selective call addresses can be used:

- **Four-Digit ID:** the allowed range is 1 to 9999.
- **Six-Digit ID:** the allowed range is 1 to 999999.

Do not select the all-zero option, neither IDs ending in 0, 00, 000, etc.

The MICOM-3 will respond to either of the configured IDs.


4-5.2.2 Options

- **Preamble** - the protocol used in this option enables synchronization to a call during 1 to 10 seconds. In this case the call includes a tone that alternates between 0 and 1 for 1 second as an example. Afterwards the transmission starts with a general call followed by a segment of “X calling Y”. The radio continues to scan until its name is received.
- **Beacon** - this option begins with a call “X calling Y”. If the call is received by Y, the response is a tone that affirms that the call was received and its quality is satisfactory. If Beacon option is off, the operator hears the call but he is not answering. This option responds to calls that their destination’s last two digits are 99.
- **Page Call** - this option uses two messages: Message No. 1 and Message No. 2. These messages can be programmed (the maximum message length is 32 characters).
- **Alarm** - this option, when enabled, causes pin 20 in the MICOM-3 accessory connector to switch from 13 V to 0 V when a call is received, and return to 13V after the call has been completed. This option is used to activate an external device connected to the radio through a relay, for example, this option can be used to activate an ASTIC device.

4-5.3 Configuring the CCIR Directory


The CCIR directory serves the same purpose as the ALE directory, except that is used when operating with the CCIR selective call option. The maximum number of addresses in the CCIR directory is 100.

The procedure used to configure the CCIR directory is similar to the procedure used to configure the ALE directory, explained in para. 4-2.3.1: to start, double-click in the CCIR Directory Configuration area, to display the CCIR directory configuration window.

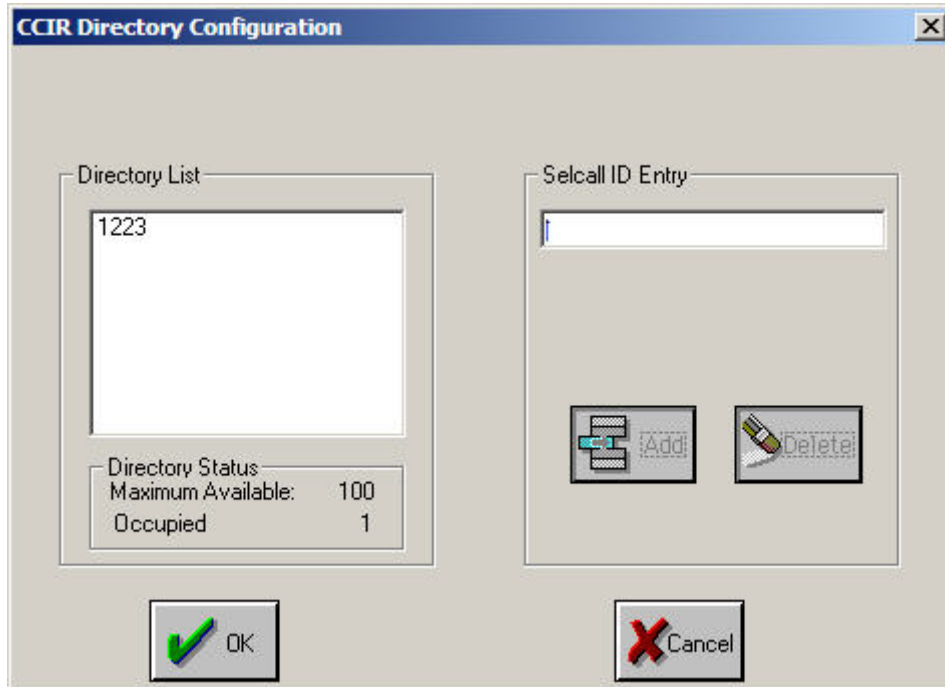


4-6. RSS CCIR PANEL

The RSS CCIR Panel replaces the standard RSS Panel when connected to radio sets supporting the CCIR digital selective call option. Its functions are similar to those of the RSS Panel explained in para. 4-1, except for an additional parameter, **Ch. Num**, which serves as a channel name that enables increasing the number of programmed channels up to 500.

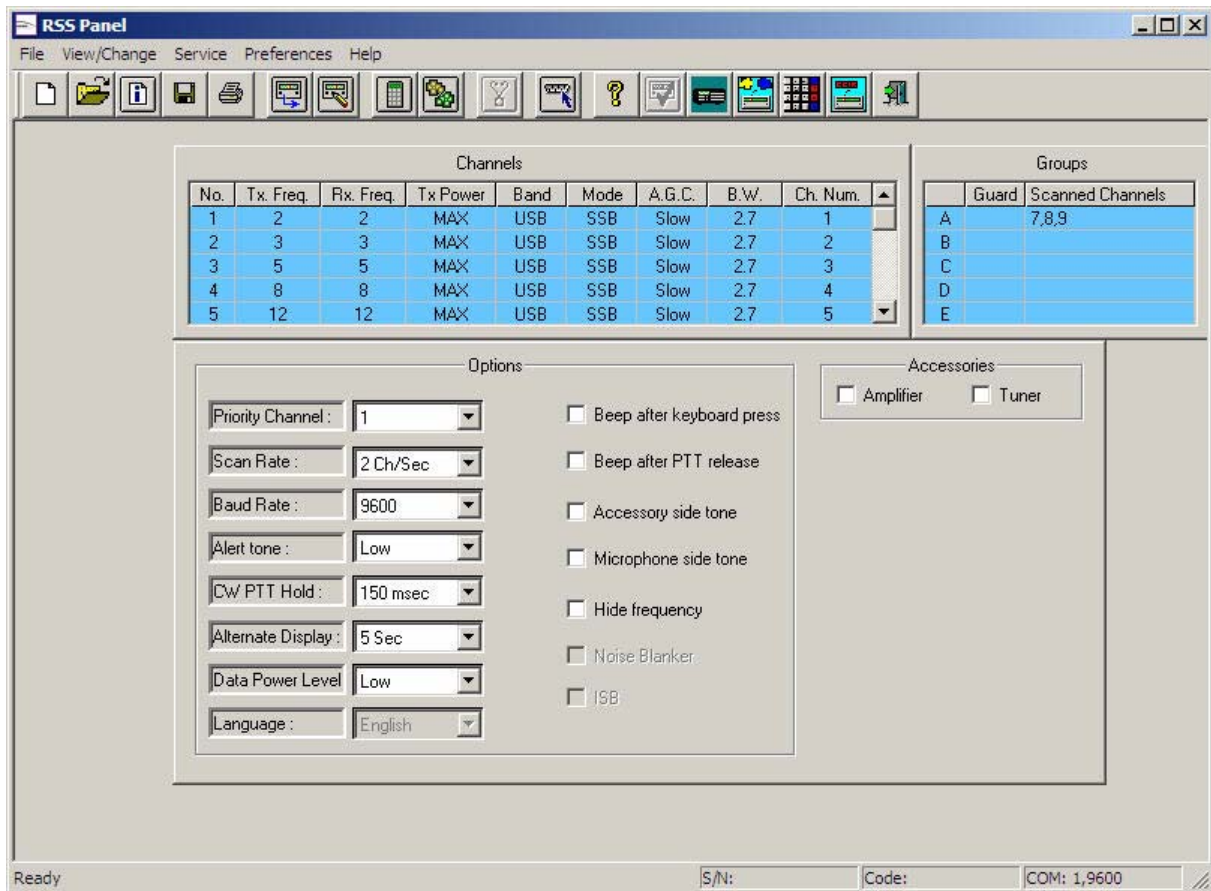

4-6.1 RSS CCIR Panel Menus

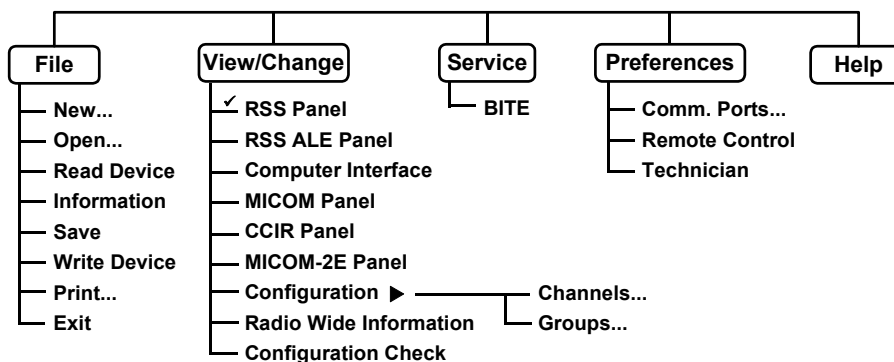

4-6.1.1 File Menu

Item	Function
New	Create a new radio parameter data base, according to the present mode
Open	Open an existing radio parameter file. The MICOM Radio Control application displays the Open dialog box, where you can locate and open the file you want.
Read Device	Load parameters from the radio
Information	Display information on the radio parameter file.

Save	Save the active radio parameter data base with its current name. If you have not named the data base, the MICOM Radio Control application displays the Save As dialog box for you to do so.
Write Device	Program the radio parameters. When there are configuration errors, the Write Device button is grayed and the Configuration Check button is highlighted, and vice versa when the configuration is free of errors.
Print	Print the current loaded radio parameters.
Exit	End the MICOM Radio Control application

4-6.1.2 View/Change Menu

Item	Function
RSS Panel	Open the RSS Panel
RSS ALE Panel	Open the RSS ALE Panel
Computer Interface	Open the Computer Interface Panel
MICOM Panel	Open the MICOM Panel
CCIR Panel	Open the CCIR Panel
MICOM-2E Panel	Open the MICOM-2E Panel (not active when connected to MICOM-3)
Configuration	Display the Configuration submenu used to configure the channel parameters and define scan channel groups
Radio Wide Information	Displays a summary of the radio hardware and software configuration
Configuration Check	Display the list of configuration errors. When there are no configuration errors, this item is grayed


4-6.1.3 Service Menu

Item	Function
BITE	Perform radio built in tests

4-6.1.4 Preferences Menu

Item	Function
Comm. Ports...	Configure the computer serial port communication parameters
Remote Control	Enable/disable radio panel keypad
Technician	Provides instructions for authorized technicians to install an MRC version supporting MICOM-2E radio sets

4-6.1.5 RSS CCIR Panel Toolbar Buttons

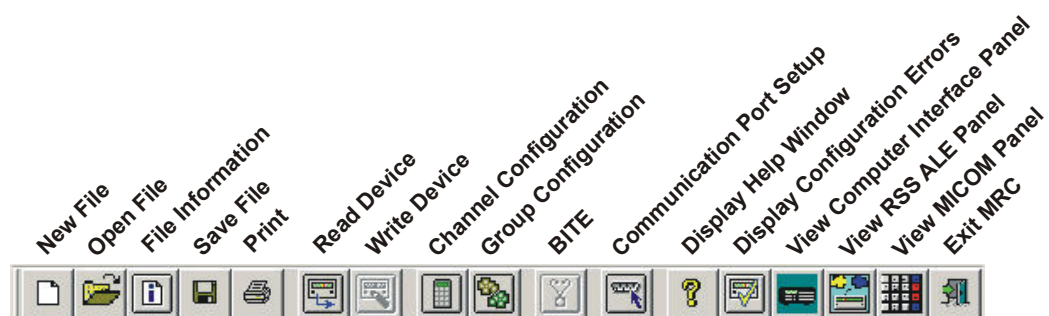

Button	Name	Function
	New	Create a new radio parameter data base, according to the present mode
	Open	Open an existing radio parameter file. The MICOM Radio Control application displays the Open dialog box, where you can locate and open the *.rss file you want.
	Information	Display information on the radio parameter file.
	Save	Save the active radio parameter data base with its current name. If you have not named the data base, the MICOM Radio Control application displays the Save As dialog box for you to do so.
	Print	Print the current loaded radio parameters.
	Read Device	Load parameters from the radio
	Write Device	Program the radio parameters. When there are configuration errors, the Write Device button is grayed and the Configuration Check button is highlighted, and vice versa when the configuration is free of errors.
	Channel Configuration	Select the channel parameters. The MICOM Radio Control application displays the Channel Configuration dialog box, where you can select the parameters for each radio channel
	Group Configuration	Select the group parameters. The MICOM Radio Control application displays the Group Configuration dialog box, where you can select the scanned channels for each group
	BITE	Perform radio built in test. The MICOM Radio Control application displays the Built-in Test Equipment dialog box, where you can select the type of test you want to perform
	Communication Ports	Select the baud rate and the serial communication port. The MICOM Radio Control application displays the Communication dialog box, where you can make the selection
	Help	Display on-line help
	Configuration Check	Display the errors in the configuration. When there are no configuration errors, this button is grayed
	Computer Interface Panel	Open the Computer Interface Panel
	RSS ALE Panel	Open the RSS ALE Panel
	MICOM Panel	Open the MICOM Panel
	Exit	End the MICOM Radio Control application